# DIN-DMX-4CH





## DIN-Rail CV Decoder

• Dimming interface: DMX512, RDM.

• PWM digital dimming, no alter LED color rendering index.

• Dimming range: 0~100%, LED start at 0.1% possible.

• Max. current output: 16A.

• Full protective plastic housing.

• Suitable for indoor environments.







0-80...384W  $4A \times 4CH$  5-24Vdc

#### **Main Characteristics**

Dimming Interface: DMX512, RDM Input Voltage: 5~24Vdc

Input Voltage: 5~24Vdc
Output Voltage: 5~24Vdc

Output Current: 4A×4CH Max. 16A

Output Power: (0~20W...96W)×4CH Max. 384W

Dimming Range: 0~100%


Mounting: DIN-Rail or Screw

Working Temperature:  $-30^{\circ}\text{C} \sim 55^{\circ}\text{C}$ 

Product Size: L112×W35×H67(mm)
Package Size: L114×W37×H70(mm)

Weight(G.W.): 135

# **Dimensions**

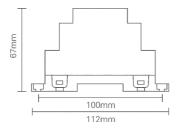






DIN Rail Mounting Size: TS-35/7.5 or TS-35/15

#### Wiring Diagram

12V lamp connected, loads 0~192W(12V). 24V lamp connected, loads 0~384W(24V).

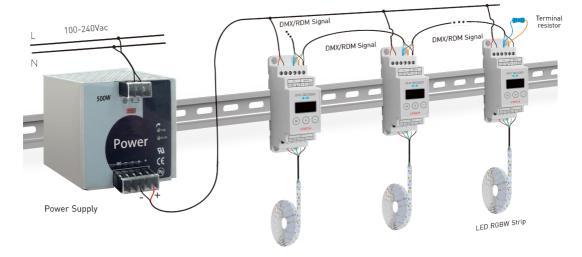


- \* An amplifier is needed when more than 32 decoders are connected, signal amplification should not be more than 5 times continuously.
- \* If the recoil effect occurs because of longer signal line or bad line quality, please try to connect 0.25W 90-120Ω terminal resistor at the end of each line.

# Terminal and key description





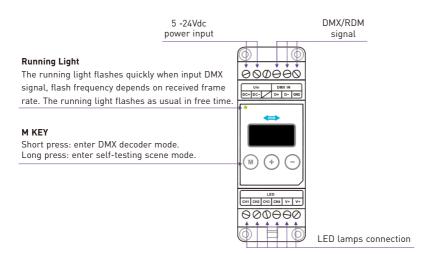

### DMX Decoder Mode.

In DMX decoder mode, the screen will be locked if unmanned operation for 15S, press ⊕ or ⊝ key to unlock.

Address Setting: Press ⊕ or ⊝ key, the 3 address value start to flicker, the DMX initial address can be changed now. (Range: 001-512)

- ① : Short press to add one more address, long press to add quickly.
- Short press to subtract one more address, long press to subtract quickly.
- M: Short press to quit.





Long press M and + key at the same time, set the brightness output to linearity curve (C-L).



Long press (M) and (—) key at the same time, set the brightness output to Gamma curve (C-E)



Long press ① and ② key at the same time, check the present luminosity curve.

#### Self-testing Scene Mode.

Long press "M" key to enter self-testing scene mode.



Switch changing modes by pressing  $\oplus$   $\ominus$  key.

NO.	Digital Tube Display (press +/- to switch)	MODE
1	P-1	Static Red
2	P-2	Static Green
3	P-3	Static Blue
4	P-4	Static Yellow
5	P-5	Static Purple
6	P-6	Static Cyan
7	P-7	Static White
8	P-8	7 Color Jumping
9	P-9	7 Color Smooth

#### Restore the Default Parameter:

Long press (ii) \( \odots \) \( \odots \) keys at the same time, Restore the default parameter, digital tube display "RES".

Default Parameters: DMX decoder mode, DMX base address is 1, Gamma curve, self-test in No.1 pattern status.

