

LTECH

UX4 TOUCH PANEL (RGBW)



Manual

www.ltech-led.com

Technical Specs

UX4 RGBW Touch Panel

Input Voltage:	5Vdc, 0.5A-1A (with an adapter)	Weight(N.W.):	230g
		Weight(G.W.):	370g
Output Signal:	RF 2.4GHz, DMX512		
Control Mode:	RGBW		
Working Temp.:	-30°C~55°C		
Package Size:	L132×W192×H50(mm)		

R4-3A Constant Voltage Receiver (receiver is sold separately)

Wireless Signal:	RF 2.4GHz	Working Temp.:	-30°C~55°C
Input Voltage:	5-24Vdc	Package Size:	L127×W35×H24(mm)
Current Load:	3A×4CH Max. 12A	Weight(G.W.):	60g
Output Power:	[0-15W...72W]×4CH Max. 288W		

R4-5A Constant Voltage Receiver (receiver is sold separately)


Wireless Signal:	RF 2.4GHz	Working Temp.:	-30°C~55°C
Input Voltage:	5-24Vdc	Package Size:	L178×W48×H33(mm)
Current Load:	5A×4CH Max. 20A	Weight(G.W.):	150g
Output Power:	[0-25W...120W]×4CH Max. 480W		

R4-CC Constant Current Receiver (receiver is sold separately)


Wireless Signal:	RF 2.4GHz	Working Temp.:	-30°C~55°C
Input Voltage:	12-48Vdc	Package Size:	L178×W48×H33(mm)
Output Voltage:	3-46Vdc	Weight(G.W.):	165g
Output Current:	CC 350/700/1050mA×4CH		
Output Power:	[1.05W-48.3W]×4CH Max. 193.2W		

Product Size


Unit: mm

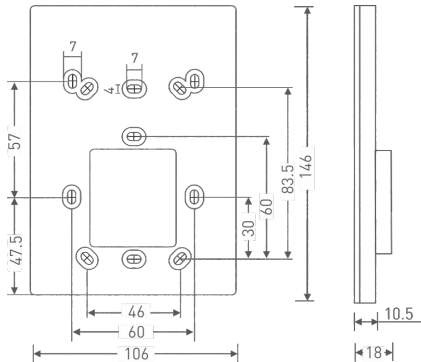

Touch Panel

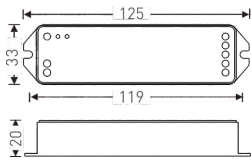


R4-3A


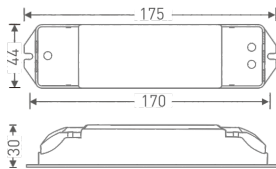


R4-5A/R4-CC


Terminals

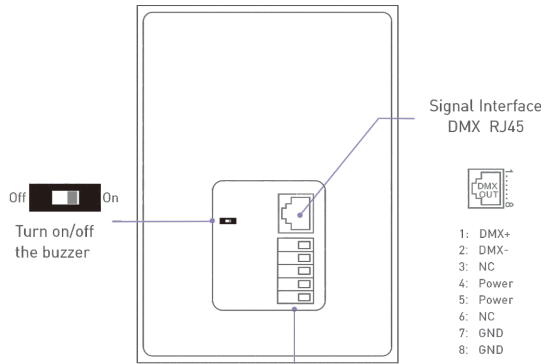


- 1: DMX+
- 2: DMX-
- 3: NC
- 4: Power
- 5: Power
- 6: NC
- 7: GND
- 8: GND

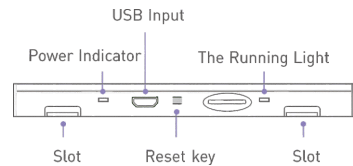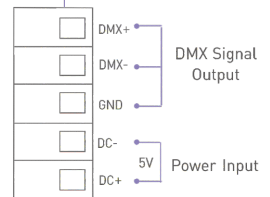


Installation Instruction

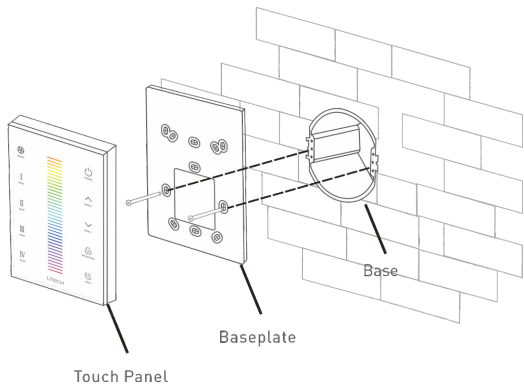


1. Install the base into the wall. Typical bases as below:

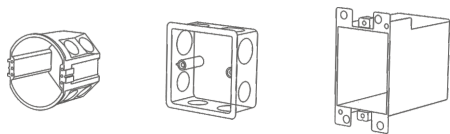



2. Use a straight screwdriver to pry the position shown:

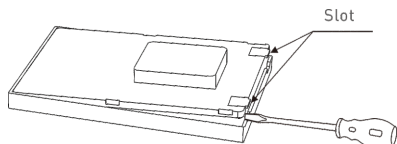



3. Screw the baseplate and the base in the wall firmly.

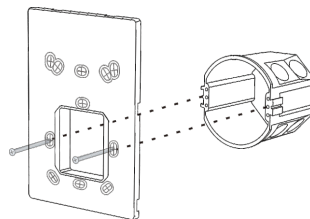


4. Connect in a right way and put the power adapter into the base.

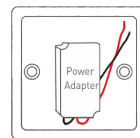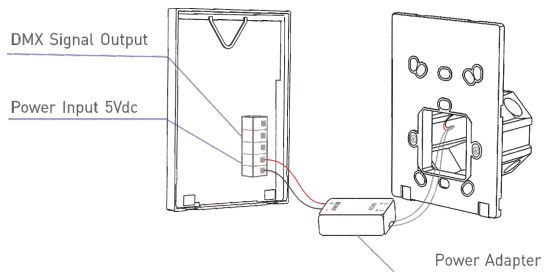

5. Embed the upper touch panel into the baseplate and then tap the bottom to press into the slots.

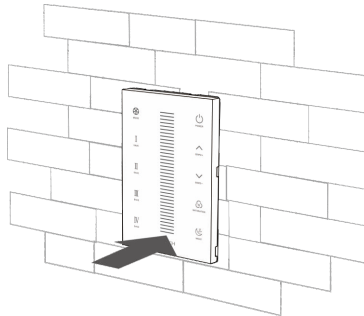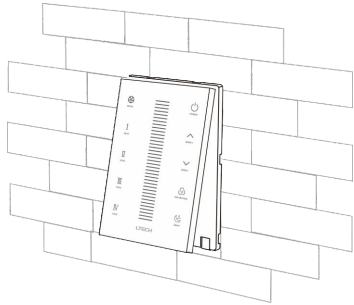

Key Functions

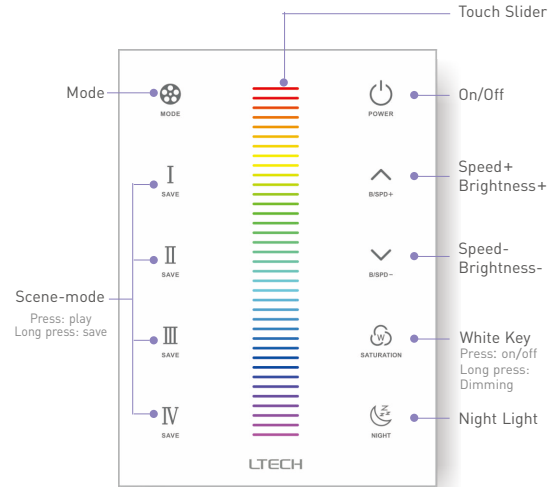









The Changing Mode (Press ⊗ to Select):













1. Static Red
2. Static Green
3. Static Blue
4. Static Yellow
5. Static Purple
6. Static Cyan
7. Static White
8. RGB Jumping
9. 7 Colors Jumping
10. RGB Smooth
11. 7 Colors Smooth
12. Static Black

Application Composition



DMX512 Signal Output :

1.  Touch panel (UX4)
2.  Touch panel (UX4) +  Remote (V4)
3.  Touch panel (UX4) +  WiFi master controller (WiFi-104)
4.  Touch panel (UX4) +  WiFi master controller (WiFi-104) +  Remote (V4)


Wireless Control:

1.  Touch panel (UX4) +  Wireless receiver (R4-3A/5A, R4-CC)
2.  Touch panel (UX4) +  Remote (V4) +  Wireless receiver (R4-3A/5A, R4-CC)
3.  Touch panel (UX4) +  WiFi master controller (WiFi-104) +  Wireless receiver (R4-3A/5A, R4-CC)
4.  Touch panel (UX4) +  WiFi master controller (WiFi-104) +  Remote (V4) +  Wireless receiver (R4-3A/5A, R4-CC)

DMX Output Wiring

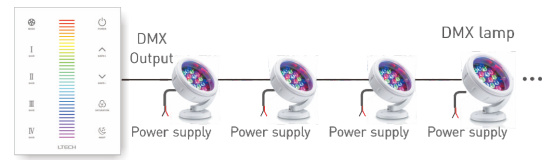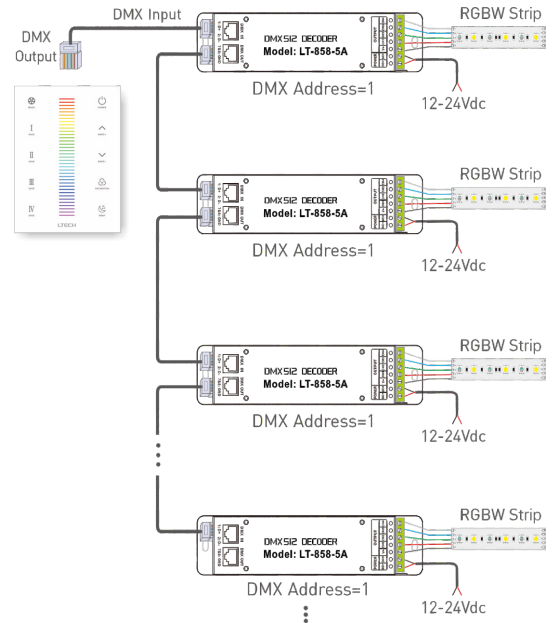

RF Wireless Wiring

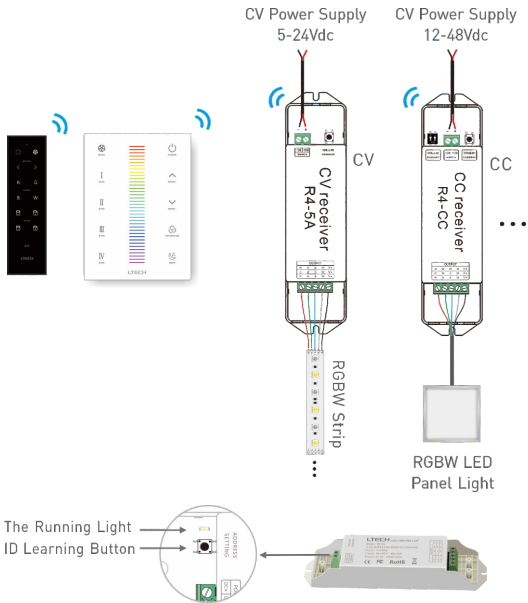

Match / Clear Code between UX4 (V4) & Receivers


Match Code:

Short press "ID learning button" on receiver (R4-3A/5A, R4-CC), then press any key on UX4 or V4, if the LEDs flicker once, match successfully.

Clear Code:

Long press "ID learning button" on receiver (R4-3A/5A, R4-CC) for 5 seconds, if the LEDs flicker twice, deactivate the matching successfully.

DMX System Wiring

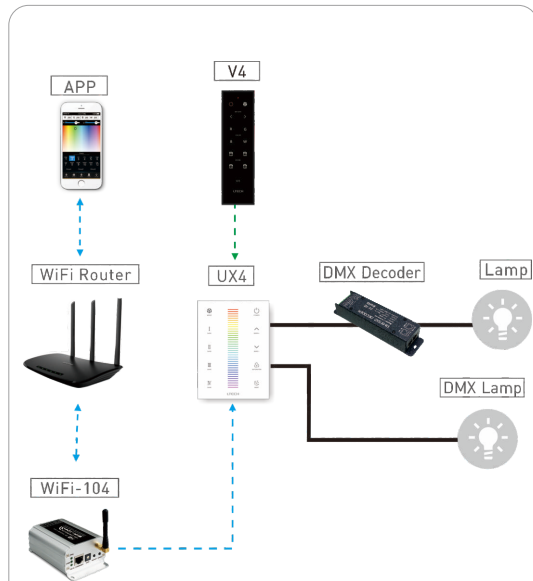


* PS: No WiFi router needed when WiFi-104 work with phones directly.

Match Code Sequence


1. Configure WiFi-104 with UX4, which enables the smart phone to control DMX device via WiFi-104.
2. Configure V4 with UX4, which enables V4 to control DMX device.

Wireless System Wiring

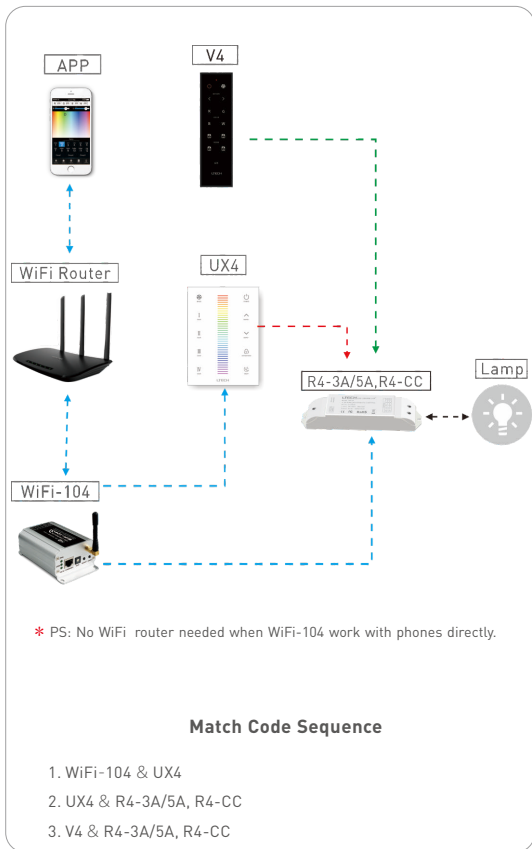

Match / Clear Code for UX4 & WiFi-104, V4, UX4

Match Code:

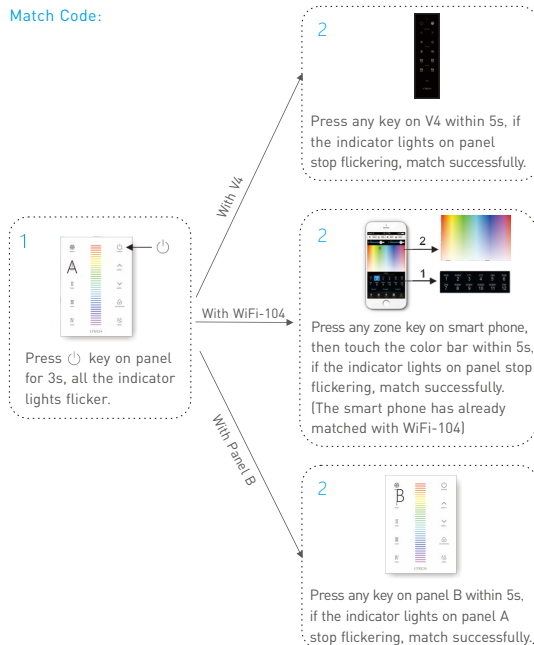

Clear Code:

