

User Instruction [0101-1]

RF Wireless Touching LED Remote Controller (Brightness Adjusting) Model No.: FUT021

1. Technical Parameters(remote control):

- 1:Power supply: AAA battery *2 pcs
- 2:Cover material:ABS

2. Technical Parameters(controller):

1. Working voltage: DC12V-24V
2. Output control: 2 channels
3. Control current: 6A/channel
4. Total output: Max. 10A
5. Dimension: L85*W45*H22mm
6. Receiving range: 30m

3. Functions of Keys


1. Key 1: on
2. Key 2: off
3. Key 3: highest brightness
4. Key 4: medium brightness
5. Key 5: lowest brightness

4. How to use

1. Use your finger to touch the color ring ,you can change the brightness from the highest to the lowest (100%-1%).
2. Resume fuction. The previous settings will be resumed while power on again.
3. Link/Unlink

Link: Press 'Key 3' one time within 3 seconds when power on, the link is done when the light blinks 3 times.


Unlink: Press'Key 3' five times quickly within 3 seconds when power on, the unlink is done when the light blinks 6 times.

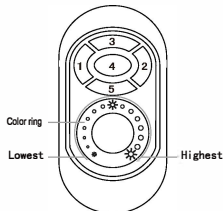

5. Caution

Please don't touch or press the color ring while loading the batteries to protect the sensitiveness. Please use the remote controller 3 seconds after the batteries are loaded.Please reload the batteries when you find the color ring is not sensitive.

6.Connecting chart:

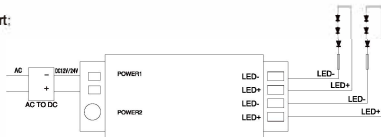

Made in China