

# User Instruction [0147]

## FUT036 RF 4 Channel LED Remote Controller

### Brightness Adjusting

#### 1. Technical Parameters (remote control)


- ① Power supply: AAA battery \* 2pcs
- ② Cover material: ABS

#### 2. Technical Parameters (controller)

- ① Working voltage: DC12V-24V
- ② Output control: 1 channel
- ③ Control current: 6A/channel
- ④ Total output Max: 10A
- ⑤ Dimension: L85\*W45\*H22mm
- ⑥ Receiving range: 30meters

#### 3. Functions of Keys

4x zone

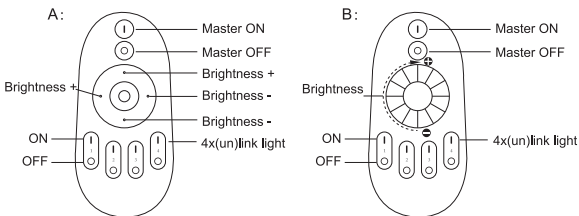

#### 4. How to use:

- ① Brightness adjusting:

Remote A: to adjust all controllers, first press "Master ON" or to adjust individual controllers, then press "Zone ON"; secondly set the adjustment for brightness;

Remote B: rotating the wheel from left to right, brightness up, from right to left, brightness down.

Brightness: 100%-1%, 11 grades to adjust;

- ② Night light mode: for individual controllers, press and hold the 'Zone OFF' from one of the 4 Zones. For all controllers, press and hold 'Master OFF'. The lights now consume only 0.4watts.
- ③ Resume function: The previous settings will be resumed while power on again!

④ Matching Code:


Press one of the "Zone ON" buttons one time within 3 seconds when power on again, the light will blink 3 times if matching is successful;

⑤ Clearing Code:

Press one of the "Zone ON" buttons five times quickly within 3 seconds when power on again, the light will blink ten times if clearing is successful;


⑥ Grouping:

You can add an endless numbers of controllers to a zone on the 4 channel remote by code-matching to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

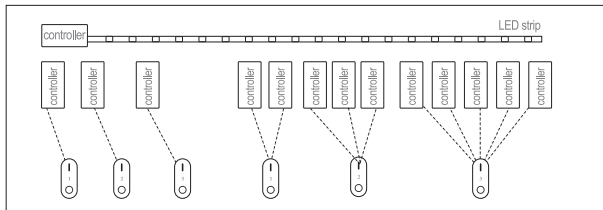

Caution: one controller can connect with up to four different remotes;

**5. Connecting Chart:**

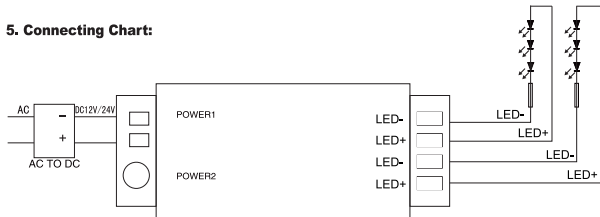

Made in China

- ② Night light mode: for individual controllers, press and hold the 'Zone OFF' from one of the 4 Zones. For all controllers, press and hold 'Master OFF'. The lights now consume only 0.4watts.
- ③ Resume function: The previous settings will be resumed while power on again!

④ Matching Code:


Press one of the "Zone ON" buttons one time within 3 seconds when power on again, the light will blink 3 times if matching is successful;

⑤ Clearing Code:

Press one of the "Zone ON" buttons five times quickly within 3 seconds when power on again, the light will blink ten times if clearing is successful;


⑥ Grouping:

You can add an endless numbers of controllers to a zone on the 4 channel remote by code-matching to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

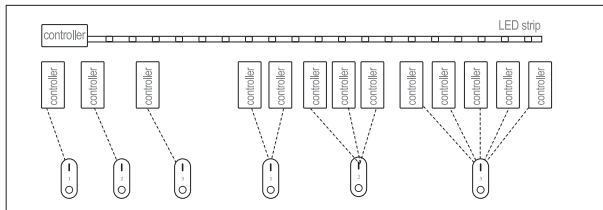

Caution: one controller can connect with up to four different remotes;

**5. Connecting Chart:**

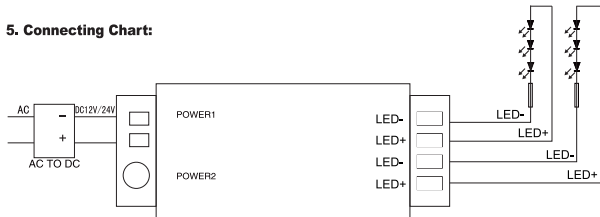

Made in China