

# RF Wireless Touching LED Remote Controller

( Both Color temperature and Brightness Adjusting) [0110]

## 1. Technical Parameters(remote control):

- 1:Power supply: AAA battery \* 2 pcs
- 2:Cover material:ABS

## 2. Technical Parameters(controller):

1. Working voltage:DC12V-24V
2. Output control: 2 circuits
3. Control current: 6A/circuit
4. Connecting method: common anode
5. Dimension: L85\*W64\*H24
6. Receiving range:20meters

## 3. Functions of Keys

1. Key 1:on
2. Key 2:off
3. Key 3:highest brightness
4. Key 4:medium brightness
5. Key 5:lowest brightness

## 4. How to use

- 1.Brightness Adjusting :Use your finger to touch the left half part of color ring ,you can change the brightness from the highest to the lowest(100%-1%,20 grades of Brightness to adjust) .
- 2.Color temperature Adjusting: Use your finger to touch the right half part of color ring,you can adjust the temperature from warm white to cool white(11grades to adjust).
- 3.Resume fuction. The previous settings will be resumed while power on again.
- 4.Matching code  
Press Key 3 once within 3 seconds when power on again,the light will blink 3 times if matching is successful.
- 5.Clearing Code  
Press Key 3 five times within 3 seconds when power on again,the light will blink 6 times if clearing is successful.

## 5. Caution:

Please don't touch or press the color ring while loading the batteries to protect the sensitiveness. Please use the remote controller 3 seconds after the batteries are loaded.Please reload the batteries when you find the color ring is not sensitive.

## 6. Connecting Chart

