

Features

This controller adopt the widely used 433MHz wireless technology with the features of low power consumption, long signal transmitting and strong anti-interference, etc. Widely used on the controlling of hotel lighting and home lighting.



433MHz RF wireless transmission technology

114mr



Remote control Control distance 30m

Input 1 (DC 5.5*2.1mm ↔ ↔) Pilot lamp Input 2 0000 19 0000 19 0000 19 0000 19 0000 19 19 0000 19 19 19 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100</td

Parameters


Remote Control

Working Voltage: 3V(2*AAA Battery) Working Temp.: -20~60°C RF: 433MHz Standby Power: 20uA Transmitting Power: <10mW Modulation Method: ASK Control Distance: 30m

Strip Controller

Input Voltage: DC12V~24V Output: 12A/Channel Total Output: Max 12A Working Temp.: -20~60°C RF: 433MHz Control Distance: 30m Output Connection: Common anode

Products Key Diagram

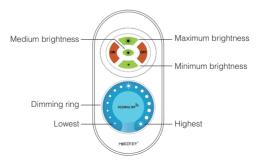

Single Color LED Strip Controller (433MHz)

Model No.: FUT041

Connect diagram

Pilot lamp instruction:

 
Always lighting means working normally; Flash means receiving remote signal.



Mote

Factory setting is one remote control one receiver. Users can group it as per the need. One remote can control countless receivers,but one receiver just can bel controlled by max 4 remotes.

Linking the controller




Switch off the light, after 10 seconds switch on again.

When the light on, short press **1 time** within 3 seconds.

The light blink 3 times slowly means the linking is done successfully.

If the light not blink slowly, the linking failed, PIs switch off the light again, and follow the above steps again.

 Unlinking the controller



Switch off the light, after 10 seconds switch on again.

When the light on, short press

The light blinking 6 times quickly, means the unlinking successfully.



If the light not blink quickly, the unlink failed, pls switch off the light again, and follow the above steps to unlink again.

Attention

- Please check whether the input voltage of the constant voltage power supply is in accordance with the controller, and please check the connection of both the cathode and anode, otherwise the controller will be damage.
- 2. Please don't connect wires with power on. Please turn on again only when it is in right connection and no short circuit.
- Non-professional user cannot dismantle the controller directly, otherwise it may damage the controller.
- Please do not use the controller in the place with widely range metal area or strong electromagnetic wave nearby, otherwise, the remote distance will be seriously affected.

