# Mi • Light® User Instruction

Model No.: FUT062

### **Features**



RGR+CCT 16 Millions of colors to choose



Color temperature 2700~6500K



Dimmable Saturation control



2.4GHz Radio Frequency



Remote control Control distance 30m



Smart phone App control Mi-Light WiFi iBox is needed







### **Parameters**

Model No.: FUT062

Power: 9W

Input Voltage: AC86~265V / 50~60Hz Color Temperature: 2700K~6500K

Luminous Flux: 700LM

 
Light Efficiency: 80LM/W

CRI: >80 PF: >0.5

Lifespan: 50000 hours

Beam Angle: 15°


Hole Size: ø120~125mm Material: Aluminum





#### Instructions

   - 1. Please open the hole on the ceiling according to the correct size of Diagram 1.
- Push in the two spring elements, make sure that they are deployed and anchored on the back of the ceiling Diagram 2 and 3.
- Connect the driver properly according to the wire connection Diagram 3.











## Link / Unlink

Compatible with FUT089 / FUT092 remote controls (Purchased separately)

Link: Switch off the power, then switch on again after 5 seconds, press " | " 3 times within 3 seconds; the light will blink 3 times slowly when it is done.

Unlink: Switch off the power, then switch on again after 5 seconds, press corresonding " | " or master ON button 5 times within 3 seconds; the light will blink 10 times quickly when it is done.

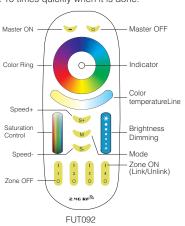

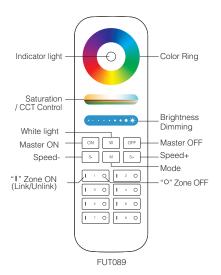

#### Caution

- •Amateur do not dismantle and install the light.
- Users must be correct, strict and solid to install the light; do not use the light on strenuous vibration area.