 


Grouping Of Several Dual White Lights:

You can add an endless numbers of lights to a zone on the 4 channel remote by linking the lights to different zones. This way you are completely flexible in creating different group combinations. Below you can see some grouping examples.

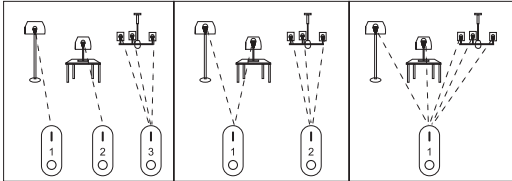

Good to know that one dual white light can connect with up to four different remote controllers, that is 16 unique zones!

Night Light Function:

Long Press "Master OFF" button, change all the light to Night Light Mode; Long press "Zone OFF" button, change the lights on each zone to Night Light Mode; The max brightness on Night Light mode is 1%.

We recommend using rechargeable batteries for the remote controls. For that reason, we don't include or dinary batteries. We hope you appreciate our environmental friendly choices and they do not cause you any inconvenience.



Made in China

Mi·Light[®] User Instruction

Dual White Full Touch 4-zone Remote Controller

Model No.: FUT091

 
Thanks for your purchase!

The remote can control the dual white (warm white and cool white) LED lights up to 4 different zones. It controls the intensity and color temperature in all groups.

In this manual, you will learn about:


- Basic functions of the remote controls:
- Linking new lights to the remote controls:
- Grouping multiple lights:
- Night light mode:

Basic Control Functions

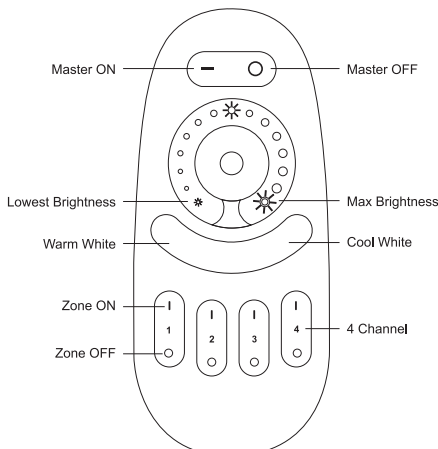

Basic Parameters

 Model No.: FUT091
RF: 2.4GHz
Voltage: 3V(2*AAA battery)
Modulation Method: GFSK
Transmitting Power: 6dBm
Standby Power Consumption: 10uA
Control Distance: 30m
Size: 120*52.5*21mm

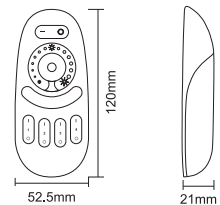

Tips

- To dim all dual white lights at once or change the color temperature, first press "Master ON". To do this with individual lights, first press "Zone ON". Secondly, set the adjustment for color temperature or brightness.
- To turn on the night light mode of a single (dual white) light, press and hold the "Zone OFF" from one of the 4 Zones. To turn on all the lights in night light mode, press and hold "Master OFF". The lights now consume only 0.4 watts.

Linking New Lights To The Remote Controls:

1. Choose which zone you want to assign the light (1 to 4)
2. Switch off the main power supply of the light in the selected zone with the main switch or pull the plug from the socket.
3. Now switch on the light again and within 3 seconds shortly press of the "Zone ON" Buttons 3 times on the remote control.
4. When this link operation is successful, the light slowly blinks 3 times on and off.

Unlinking The White Lights:

1. Check via the remote control to see which zone (1 to 4) is already linked to a light.
2. Switch off the main power supply of the light with the main switch or pull the plug from the socket.
3. Now switch on the light again and within 3 seconds press 5 times quickly and shortly on one of the "Zone ON" buttons which you want to unlink.
4. When this unlink operation is successful the light quickly blinks 9 times on and off.