1. Features


This item is made by 2.4G wireless transfer technology with low consumption and anti-interference. It supports PWM dimming without any flashing and it's built-in power driver which is easy to power on device and protect led chip. There is overload protection.

16 Millions of Ø colors to choose

-0 Mix red, green and blue light to adjust color temperature


5 Dim brightness/ Saturation

2.4G RF wireless transmission 2.4G technology

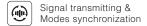

Remote control Control distance 30m


Ţ

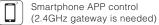

High Voltage RGB Dimming LED Driver

MIBOXER[®] |Mi·Light Subordinate New Brand


Model No.: HE3-P400V210

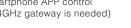


Support third party voice control (2.4GHz gateway is needed)


2. Parameters

Model No.: HF3-P400V210 Input Voltage: 220~240VAC 50/60Hz Input Current: Max 4.1A@230VAC Output Voltage: DC 210V Output Current: Max 1.8A/Channel Total Output: Max 1.8A Rated Power: Max 400W Efficiency: 94% Control Distance: 30m Working Temp.: -10~40°C Storage Temp .: -40~80°C Working Humidity: 20~95%RH, non-condensing Overload Protection: Limited power

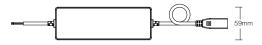

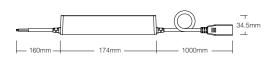

3. Connection Diagram

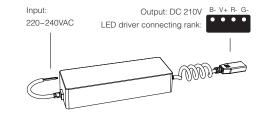



Compatible with following remote controls

(Purchase separately)

HEOKER MBOXER* нархая Θ HEOXER CONTACTOR --------A LICE A B0 B3 / T3 B4 / T4 WL-Box1

4. Link Code / Unlink Code with remote

Link code

1. Switch off LED driver, switch on again after 10 seconds. 2. Short press zone " | " or " ON " 3 times on remote within 3 seconds, light blinking 3 times slowly means the linking is done successfully

Unlink code

1. Switch off LED driver, switch on again after 10 seconds. 2. Short press zone " | " or " ON " 5 times on remote within 3 seconds, light blinking 10 times guickly means the unlinking is done successfully.



Light will work after linking with remote control: for more details, pls read the remote instruction.

5. Auto-transmitting & Synchronization

Signal transmitting

LED driver can transmit the signals from the remote control to another one within 30m, as long as there is LED driver within 30m, the remote control distance is unlimited.

Modes synchronization

Different LED driver can work synchronously when they are started at different times, controlled by the same remote, under same dynamic mode and within 30m distance.



6. Dynamic mode selection

Select dynamic mode sheet 1:

LED driver is powered off for 10 seconds and then powered on. Press the "S+" button 5 times within 3 seconds, the blue light blink 3 times slowly, selection is done successfully.

Select dynamic mode sheet 2:

LED driver is powered off for 10 seconds and then powered on. Press the "S-" button 5 times within 3 seconds, the yellow light blink 3 times slowly, selection is done successfully.

Dynamic mode sneet (default in factory)		
Number	Dynamic Mode	Brightness / Saturation / Speed
1	Mardi Gras	
2	Automatic color change	
3	Sam	
4	Gemstone	
5	Twilight	Adjustable
6	American	
7	Fat Tuesday	
8	Party	
9	Slow Color Splash	

Dynamic mode sheet 1 (default in factory)

Dynamic mode sheet 2 (need to switch manually) Number Dynamic Mode Brightness / Saturation / Speed Colors gradual change White light Gradual change 2 RGB gradual change 3 Seven colors iump to change 5 Jump to change randomly Adjustable Red light gradual change 6 +Flash 3 times Green light gradual change +Flash 3 times Blue light gradual change +Flash 3 times White light gradual change 9 +Flash 3 times

7. Switch-OFF to change color instruction

Switch OFF (for 3 seconds); Switch-ON again	Switch-OFF (for over 3 seconds); Switch ON again
Switch the colors and dynamic modes in turn	
1. Static Red	
2. Static Green	
3. Static Blue	
4. Static Yellow	
5. Static Purple	Status before Switch OFF
6. Static Cyan	
7. Static Cool White	
8 to 16 is dynamic mode	
(Attention: default mode is dynamic mode sheet 1, users can switch to dynamic mode sheet 2 manually, please review details in No.6)	

8. Attention

1. Please check whether the input voltage supply is in accordance with the strip light driver.

- Non-professional user cannot dismantle the strip light driver directly, otherwise, it may and electric shock.
- The working temperature is -10~40°C; do not use the device to direct sunlight, moist and other high temperature area.
- Please do not use strip light driver around the mental area and high magnetic field, otherwise, it will badly affect the control distance.

