

User Guide

4 Zone Dimming and CCT RF Remote Controller


Summary

- Apply to single color or dual color LED controller, dimming driver or smart lamp.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- Each remote can match one or more receiver.
- Operate with LED indicator light.

Technical parameter

- Output signal: RF(2.4GHz)
- Working voltage: 3VDC(AAA*2pcs)
- Working current: < 20mA
- Standby current: < 4μA
- Standby time: 12 months
- Remote distance: 30m
- Working temperature: -30°C~55°C
- Dimension: L115×W53×H18mm
- Weight: 60g

Dimension

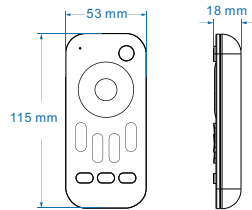

Match guide

Remote match with 2.4G RF controller, dimming driver, smart lamp and panel controller.

Match with controller(with match key)

1. Match: Short press match key, within 5s, press zone key of the remote.
2. Delete: Long press match key for 5s, delete all matched remote.

Match with controller(without match key), dimming driver or smart lamp

1. Match: Switch off the power, then switch on power again, short press zone key 3 times on the remote quickly within 5s after power on, the link is done once the light blinks 3 times.
2. Delete: Switch off the power, then switch on power again, short press zone key 5 times on the remote quickly within 5s after power on, the unlink is done once the light blinks 5 times.

Match with panel controller

1. Match: Turn on light, turn off, immediately press on/off key for 5s, within 5s, press zone key of the remote.
2. Delete: Turn on light, turn off, immediately press on/off key for 10s, delete all matched remote.

RA1 4 zone dimming remote



All on/off:

Turn on/off all 4 zone light.

Zone 1/2/3/4 on/off:

Turn on/off zone light, at the same time, select current zone.

Continuous short press multiple Zone on key, will synchronous select multiple zone.

Brightness+/-:

Adjust current selected zone brightness.


Short press 10 levels, long press 1-5s continuous 256 levels adjustment.

Scene 1/2/3:

Short press run the scene, long press 2s save.

4 zone run or save synchronously.

RA2 4 zone CCT remote

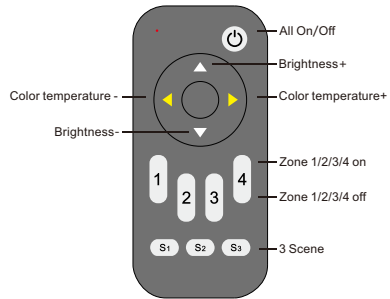

All on/off:

Turn on/off all 4 zone light.

Zone 1/2/3/4 on/off:

Turn on/off zone light, at the same time, select current zone.

Continuous short press multiple Zone on key, will synchronous select multiple zone.

Brightness+/-:

Adjust current selected zone brightness.

Short press 10 levels, long press 1-5s continuous 256 levels adjustment.

Color temperature+/-:

Adjust current selected zone color temperature.

Short press 11 levels, long press 1-5s continuous 256 levels adjustment.



1	11
Warm White	Cool White
WW 100%	WW 0%
CW 0%	CW 100%

Scene 1/2/3:

Short press run the scene, long press 2s save.

4 zone run or save synchronously.

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.