 


RF wireless Remote Controller

Classy Series (R7,R7-1,R12,R17,R22)

CE ROHS

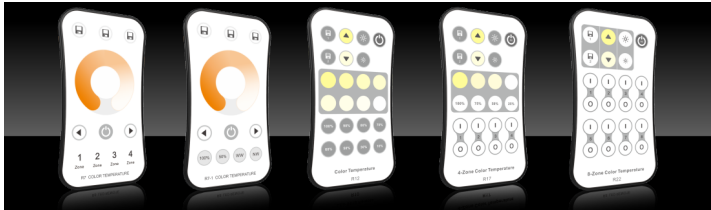

 
Summary

- Match with our dual color controllers or smart LED lamps.
- Single zone, four zone and eight zone version are available.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- CR2032 button battery power supply.
- Operate with LED indicator light.
- Each remote can match one or more receiver.

Technical Parameters

- Output signal: RF(2.4GHz)
- Working voltage : 3VDC(CR2032)
- Working current: < 20mA
- Standby current: R7,R7-1: < 10 μ A
R12,R17,R22: < 4 μ A
- Standby time: R7,R7-1: 6 months
R12,R17,R22: 12 months
- Remote distance: 30m
- Working temperature: -30 $^{\circ}$ C~55 $^{\circ}$ C
- Dimension: L107 \times W58.5 \times H9mm
- Weight: 34g

Dimension

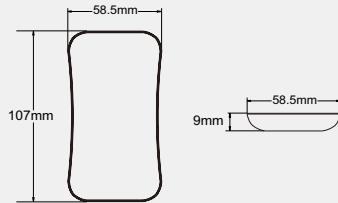

Match method

For controller with match key

- Match: Short press match key, within 5s, press any key of the remoter.
- Delete: Long press match key for 5s, delete all matched remoters.

For panel controller

- Match: Turn on light, turn off, immediately press on/off key for 5s, within 5s, press any key of the remoter.
- Delete: Turn on light, turn off, immediately press on/off key for 10s, delete all matched remoter.

 
For smart lamp or controller without match key

- Match: Switch off the power, then switch on power again, short press on/off key 3 times on the remoter quickly within 5s after power on, the link is done once the light blinks 3 times.
- Delete: Switch off the power, then switch on power again, short press on/off key 5 times on the remoter quickly within 5s after power on, the unlink is done once the light blinks 5 times.


Note: 4/8 zone remoter must use zone key match each zone receiver.

Key Function

Color temperature adjustment by touch color wheel or press color temperature +/- key

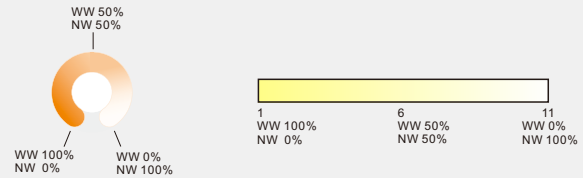

R7 4 zone CCT remoter

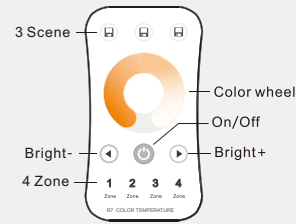 


- On/Off:** Short press turn on/off current zone light, long press 2s turn off all zone light.
- 1,2,3,4 zone:** Short press select and turn on zone light, long press 2s turn off zone light. Continuous short press multiple zone key, can synchronous select multiple zone.
- Color wheel:** Touch to change current zone color temperature.
- Bright+/-:** Adjust brightness for current selected zone, short press 10 levels, long press 1-5s continuous 256 levels adjustment.
- 3 Scene:** Short press run the scene, long press 2s save. 4 zone run or save synchronously.

Note: Before the first use, please remove the insulating film on the battery.


Note: To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

 R7-1 Single zone CCT remoter

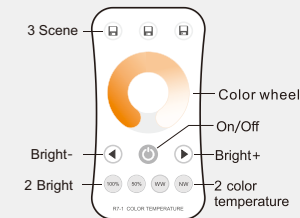

- On/Off:** Turn on/off light.
- Color wheel:** Touch to change color temperature.
- Bright+/-:** Adjust brightness, short press 10 levels, long press 1-5s continuous 256 levels adjustment.
- 100%,50%:** Get 100% or 50% brightness directly.
- WW:** Get warm white directly.
- NW:** Get cold white directly.
- 3 Scene:** Short press run the scene, long press 2s save.

 R12 Single zone CCT remoter

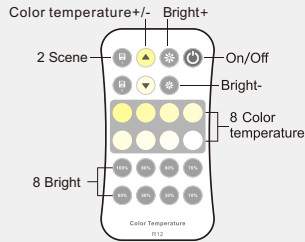

On/Off: Turn on/off light.
Color temperature +/-: Adjust color temperature, short press 11 levels, long press 1-5s continuous 256 levels adjustment.
Bright+ /-: Adjust brightness, short press 10 levels, long press 1-5s continuous 256 levels adjustment.
8 color temperature: Get 8 kinds color temperature directly.
8 bright: Get 8 kinds brightness directly.
2 Scene: Short press run the scene, long press 2s save.

Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting
No response from the remoter	<ol style="list-style-type: none"> 1. The battery has no power. 2. Beyond controllable distance. 3. The controller did not match the remoter. 	<ol style="list-style-type: none"> 1. Replace battery. 2. Reduce remote distance. 3. re-match the remoter.

 
Safety & Warnings

1. When installing battery, pay attention to the battery positive and negative polarity.
2. When remote distance becomes smaller and insensitive, replace the battery.
3. A long time without the remote control, remove the battery.
4. Gently handle remoter, beware of falling.
5. This product is suitable for cleaning, drying, and suitable temperature.

Warranty Agreement


1. 3-year warranty:
 - The warranty is for free repair or replacement and covers manufacturing faults only.
 - Do not include fees of on site maintenance and consumable parts.
2. Limited Warranty
 - Artificial damage caused by improper use, such as use inappropriate power supply, improper accessories, improper installation, did not follow the instructions, error using or negligence.
 - Any damages caused by force majeure, such as natural disaster, abnormal voltage.
 - The normal use of products caused by aging, wear and tear, but it does not affect the normal use.

R17 4 zone CCT remoter

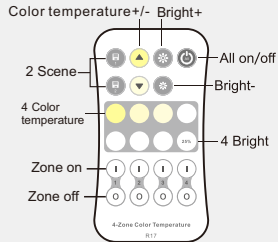

All on/off: Turn on/off all 4 zone light.
1,2,3,4 zone on/off: Turn on/off zone light, at the same time, select current zone. Continuous short press multiple zone on key, can synchronous select multiple zone.
Color temperature +/-: Adjust color temperature for current selected zone, short press 11 levels, long press 1-5s continuous 256 levels adjustment.
Bright+ /-: Adjust brightness for current selected zone, short press 10 levels, long press 1-5s continuous 256 levels adjustment.
4 color temperature: Get 4 kinds color temperature directly.
4 bright: Get 4 kinds brightness directly.
2 Scene: Short press run the scene, long press 2s save.
4 zone run or save synchronously.

 R22 8 zone CCT remoter

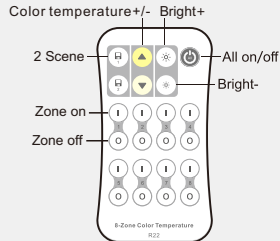

All on/off: Turn on/off all 8 zone light.
1,2,3,4,5,6,7,8 zone on/off: Turn on/off zone light, at the same time, select current zone. Continuous short press multiple zone on key, can synchronous select multiple zone.
Color temperature +/-: Adjust color temperature for current selected zone, short press 11 levels, long press 1-5s continuous 256 levels adjustment.
Bright+ /-: Adjust brightness for current selected zone, short press 10 levels, long press 1-5s continuous 256 levels adjustment.
2 Scene: Short press run the scene, long press 2s save.
8 zone run or save synchronously.