

# User Guide

## Ultrathin Touch Slide RF Remote Controller

### Feature

- Apply to single color, dual color or RGB LED controller, dimming driver or smart lamp.
- Ultra sensitive color adjustment touch slide.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- Each remote can match one or more receiver.
- Battery powered (CR2032).
- Operate with LED indicator light.

### Technical parameter

- Output signal: RF(2.4GHz)
- Working voltage : 3VDC(CR2032)
- Working current: < 5mA
- Standby current: < 10 $\mu$ A
- Standby time: 1 year
- Remote distance: 30m
- Working temperature: -30 $^{\circ}$ C~55 $^{\circ}$ C
- Dimension: L139 $\times$ W36 $\times$ H11mm
- Weight: 40g

### Operation

- Pull out the plastic battery barrier sheet from the battery compartment located on the bottom of the remote.

### Match guide

Remote match with 2.4G RF controller, dimming driver or smart lamp. there are two kinds of method to match receivers.

#### • Use Match key

##### Match with controller(with match key)

1. Match: Short press match key, then press on/off key of the remote within 5s.
2. Delete: Long press match key for 5s, delete all matched remote.

#### • Use Power-up

 
##### Match with controller(without match key), dimming driver or smart lamp

1. Match: Switch off the power, then switch on power again, short press on/off key 3 times on the remote quickly within 5s after power on, the link is done once the light blinks 3 times.
2. Delete: Switch off the power, then switch on power again, short press on/off key 5 times on the remote quickly within 5s after power on, the unlink is done once the light blinks 5 times.


### Model table

Model	Name	Application
R11	1 zone dimming remote	1 zone single color
R12	1 zone CCT remote	1 zone dual color
R13	1 zone RGB remote	1 zone RGB color


### Dimension

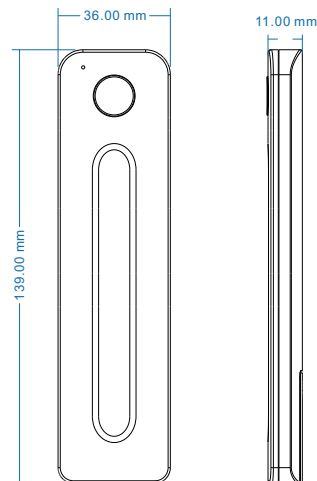


## R11 1 zone dimming remote

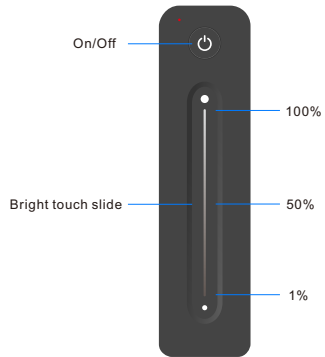 

## R13 1 zone RGB remote

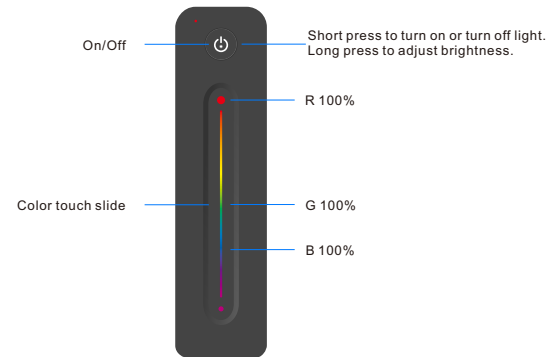 

## R12 1 zone CCT remote

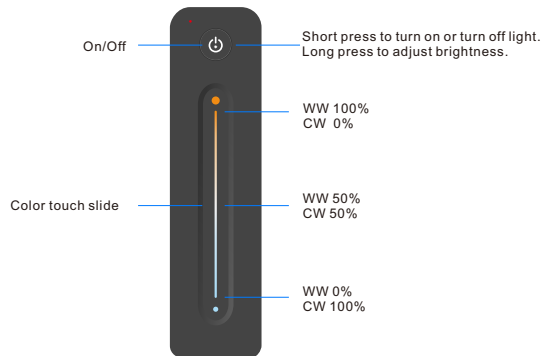 

## Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.  
A long time without the remote control, remove the battery.  
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.