10-key Remoter Series (R1,R2,R3,R4,RU4,RU8)

(€ ROHS



Dimension

Summary

- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- . Can match one or more controller or smart lamps.
- . CR2032 button battery power supply.
- Operate with LED indicator light.

Technical Parameters

- Output signal: RF(2.4GHz)
- Working voltage: 3VDC(CR2032)
- Working current: < 20mA
- Standby current: < 4uA
- Standby time: 12 months
- Remote distance: 30m
- Working temperature: -30°C~55°C
- Dimension: L135×W40×H11mm
- Dimension: L135×W40×H11mr
- Weight: 41a

Match method

For controller with match key

- Match: Short press match key, within 5s, press any key of the remoter.
- Delete: Long press match key for 5s, delete all matched remoters.

For panel controller

- Match: Turn on light, turn off, immediately press on/off key for 5s, within 5s, press any key of the remoter.
- Delete: Turn on light, turn off, immediately press on/off key for 10s, delete all matched remoter.

For smart lamp or controller without match key

- Match: Switch off the power, then switch on power again,
 - short press on/off key 3 times on the remoter quickly within 5s after power on, the link is done once the light blinks 3 times.
- Delete: Switch off the power, then switch on power again, short press on/off key 5 times on the remoter quickly within 5s after power on, the unlink is done once the light blinks 5 times.

Note: 4/8 zone remoter must use zone key match each zone receiver.

Key function

Dimming Remoter



Model: R1

Apply to single color LED lamp, Switch or adjust the brightness.

Brightness+/-:

Short press 10 levels,

long press 1-5s continuous 256 levels adjustment.
Two scene memory, long press 2s save.

Note: Before the first use, please remove the insulating film on the battery.

Color Temperature Remoter



Model: R2

Apply to WW+NW, WW+NW+CW LED lamp, adjust color temperature and brightness.

Color temp+/-: Short press 11 levels,

Brightness+/-: Short press 10 levels,

long press 1-5s continuous 256 levels adjustment.

Two scene memory, long press 2s save.

RGB Remoter



Model: R3

Apply to RGB LED lamp, creat a colorful static or dynamic effect.

Brightness: Short press 10 levels,

long press continuous 256 levels adjustment.

Mode: Short press run next mode.

long press 2s run mode-cycle.

Speed: Short press 10 levels, long press 2s the fastest speed.

Red, Green, Blue + / -:

Independent adjustment of R/G/B brightness, short press 10 levels.

long press 1-5s continuous 256 levels adjustment.

RGBW Remoter



Model: R4

Apply to RGBW LED lamp,

creat a colorful static or dynamic effect.

Brightness: Short press 10 levels,

long press 1-5s continuous 256 levels adjustment.

Mode: Short press run next mode,

Speed: Short press 10 levels, long press 2s the fastest speed.

Color: Short press get 24 kinds static color, long press continuous static color adjustment.

Saturation: Short press 11 levels.

long press 1-5s continuous 256 levels adjustment.

Red, Green, Blue, White:

 $Independent\ adjustment\ of\ R/G/B/W\ brightness,$

short press turn on/off,

long press 1-5s continuous 256 levels adjustment.

4 Zone Dimming Remoter



Model: RU4

Apply to single color LED lamp, Switch or adjust the brightness.

All on/off: Turn on/off all 4 zone light.

Zone 1-4 on/off: Short press turn on/off zone light,
long press 1-5s continuous 256 levels adjust brightness.

RU4 is default as 4 zone dimming remoter, also can be used as single zone 4 channel dimming remoter. All on + Zone4 on: Long press 25 set as 4 channel dimming remoter, match with one receiver of 4 channel, such as V4 or C4 controller.

All off + Zone1 off: Long press 2s set as 4 zone dimming remoter, match with four receivers.

8 Zone Dimmina Remoter



Model: RU8

Apply to single color LED lamp, Switch or adjust the brightness.

All on/off: Turn on/off all 8 zone light.

Zone 1-8 on/off: Short press turn on/off zone light,
long press 1-5s continuous 256 levels adjust brightness.

Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting
No response from the remoter	The battery has no power. Beyond controllable distance. The controller did not match the remoter.	Replace battery. Reduce remote distance. re-match the remoter.

Safety & Warnings

- 1. When installing battery, pay attention to the battery positive and negative polarity.
- 2. When remote distance becomes smaller and insensitive, replace the battery.
- 3. A long time without the remote control, remove the battery.
- 4. Gently handle remoter, beware of falling.
- 5. This product is suitable for cleaning, drying, and suitable temperature.

Warranty Agreement

- 1. 3-year warranty:
- The warranty is for free repair or replacement and covers manufacturing faults only.
- Do not include fees of on site maintenance and consumable parts.
- 2. Limited Warranty
- Artificial damage caused by improper use, such as use inappropriate power supply, improper accessories, improper installation, did not follow the instructions, error using or negligence.
- Any damages caused by force majeure, such as natural disaster, abnormal voltage.
- The normal use of products caused by aging, wear and tear, but it does not affect the normal use.