

# User Guide

## Multiple Zone RGB/RGBW RF Remote Controller

### Summary

- Apply to RGB or RGBW LED controller, dimming driver or smart lamp.
- Ultra sensitive color adjustment touch wheel.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- Each remote can match one or more receiver.
- Battery powered (2 x AAA).
- Operate with LED indicator light.

### Technical parameter

- Output signal: RF(2.4GHz)
- Working voltage: 3VDC(AAA\*2pcs)
- Working current: < 5mA
- Standby current: < 10μA
- Standby time: 2 years
- Remote distance: 30m
- Working temperature: -30℃~55℃
- Dimension: L141×W50×H17.5mm
- Weight: 164g

### Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

### Match guide

Remote match with 2.4G RF controller, dimming driver or smart lamp. there are two kinds of method to match receivers.

#### • Use Match key

##### Match with controller(with match key)

1. Match: Short press match key, within 5s, press on/off key or zone key of the remote.
2. Delete: Long press match key for 5s, delete all matched remote.
3. Multiple zone remote only use zone key to match each zone receiver.

#### • Use Power-up

##### Match with controller(without match key), dimming driver or smart lamp


1. Match: Switch off the power, then switch on power again, short press on/off key or zone key 3 times on the remote quickly within 5s after power on, the link is done once the light blinks 3 times.
2. Delete: Switch off the power, then switch on power again, short press on/off key or zone key 5 times on the remote quickly within 5s after power on, the unlink is done once the light blinks 5 times.
3. Multiple zone remote only use zone key to match each zone receiver.

### Key function


#### • RS3: 2 zone RGB/RGBW remote



#### • RS4: 4 zone RGB/RGBW remote

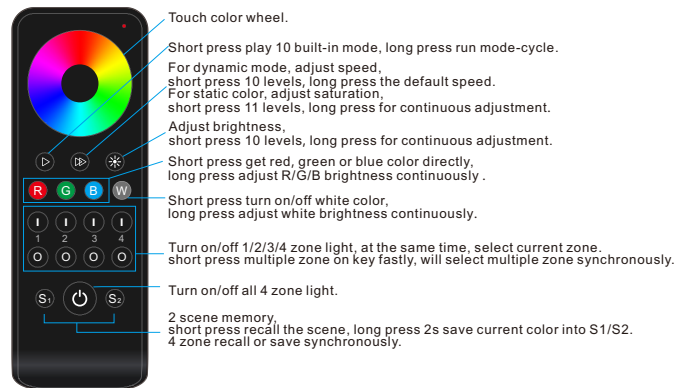

● RS8: 8 zone RGB/RGBW remote

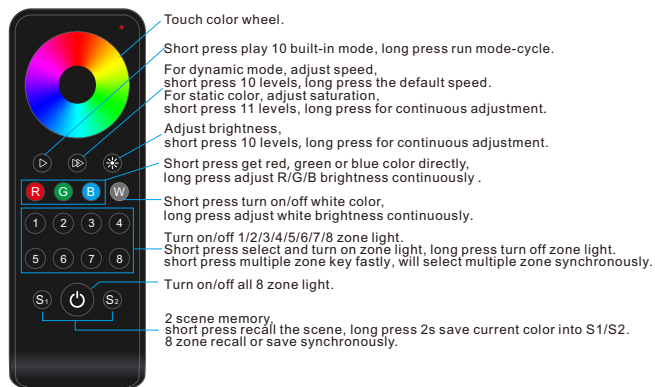

## Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.  
A long time without the remote control, remove the battery.  
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.

## Dimension

