Wall Mounted Touch Panel



Model No.: T20, T20-1, T20-2, T20-3

1-4 Zone dimming switch/Glass touch panel/Wireless remote 30m distance/AAA x 2 battery



4 Zone switch

CE RoHS emc LVD RED

Features

- Touch panel 1/2/3/4 zone dimming switch RF remote.
- Each zone can remote control multiple receivers, including Skydance's 2.4G LED controller, dimming driver or smart lamp.
- Ultra sensitive high strength glass touch panel.
- Touch keys with chord tones and LED indicator.
- Free installation, no wiring, removable.
- AAA x 2 battery powered.

Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(AAA × 2)
Working current	< 20mA
Standby current	< 20µA
Standby time	l year
Remote distance	30m

5 years

Warranty

Warranty


User Manual Ver 1.0.2 2018.11.01

Safety and EMC	
EMC standard (EMC)	EN301 489,EN 62479
Safety standard(LVD)	EN60950
Radio Equipment(RED)	EN300 328
Certification	CE,EMC,LVD,RED

Environment	
Operation temperature	Ta:-30 °C ~ +55 °C
Case temperature (Max.)	Tc:+85℃
IP rating	IP20


Installation rack Battery compartments



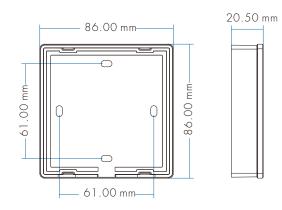


Installation diagram:

Typical base as below:

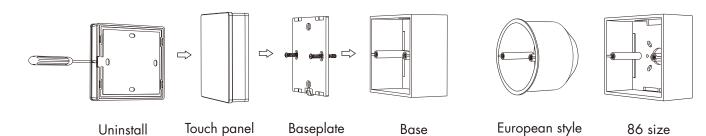

Key function

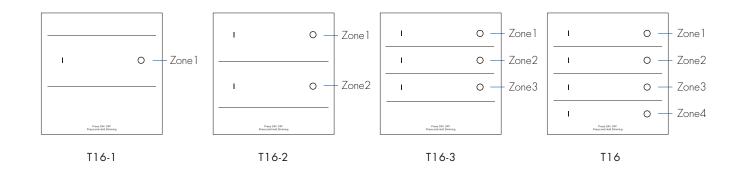

ı — ON key

Short press: Turn on the light of each zone. Long press(1-6s): Dimming up when light is on.

0 — OFF key

Short press: Turn off the light of each zone. Long press(1-6s): Dimming down when light is on. Long press(5s) : Turn on or turn off tone when light is off.

Touch Panel work as RF remote (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key	Use Power Restart
Match: Short press match key, immediately press ON key of the touch panel.	Match: Switch off the power of the receiver, then switch on power again, immediately short press ON key 3 times on the touch panel. The light blinks 3 times means match is successful.
Delete: Press and hold match key for 5s to delete all match, The light blinks 5 times means all matched remotes were deleted.	Delete: Switch off the power of the receiver, then switch on power again, immediately short press ON key 5 times on the touch panel. The light blinks 5 times means all matched remotes were deleted.

Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.