# 2.4G Touch Remote Control Instructions



## 1.Brief:

RBX series (RB1, RB2, RB3, RB4) and RCX series (RC1, RC2, RC3, RC4) are 2.4G RF wireless touch remote controls, which can work with our SP63XE, SP52XE etc. series controllers.

## 2.Features:

- 2.4G wireless remote control technology, with low power consumption, long transmission distance, strong anti-interference ability etc..
- 2. Touch control, high sensitivity, good consistency and reliability.
- Support one-to-many control, a remote control can control multiple controllers.
- ${\it 4. Support multi-to-many control, each controller can bind up to 5} \\ {\it remote controls.}$

Support unified control and 4-zones control.

# 3.Functions:

### Remote Models




## 86-Type Panel Models






RC3

RC4

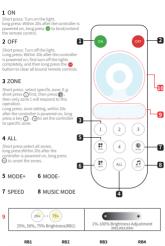

HUL	HUL	1100	11.04
100% 0% Brightness	Warm/Nature/ Cold White	White	Color HUE/ Temperature Ring
rightness Ring	Temperature Ring	Color HUE Ring	Color HUE/ Temperature Ring

 

## 1 ON

Short press: Turn on the light.

long press: Within 20s after the
controller is powered on, long press
to bind/unbind the remote control.

#### 3 ALL

Short press:select all zones. long press:Within 20s after the controller is powered on, long press. to unset the zones.

### 2 OFF

Long press: Within 20s after the controller is powered on, first turn off the lights completely, and then long press the obutton to clear all bound remote controls.

### 41,2,3,4

press ① first, then press ② , then only zone 1 will respond to this operation.

Long press: zone setting, within 20s after the controller is powered on, long press a key

① … ② to set the controller to specific zone.

## 5 SPEED 6 MODE 7 MUSIC MODE



Brightness Level WarmyNature/ White Color HUE/ Color HU

## 4 Technical Parameters:

Working Voltage:3V(CR2032)	Quiescent Current: 26uA	
RF frequency: 2.4GHz	Remote Range:30M	
Remote DIMensions: 135mm*48mm*10mm	Panel DIMensions:86mm*86mm*12mm	

# 5. Cautions:

- Please match the model of remote control correctly according to the model of controller.
- 2. If the LED indicator appears to be unresponsive or flashing chaotically, please replace the battery in time, please do not use inferior batteries.
- 3. Do not touch the touch panel within 2S after installing the new battery. 4. Please do not use it in high humidity, high temperature, dusty
- and high pressure environment.
- 5. Please do not use the remote control in strong
- electromagnetic interference area, otherwise it will seriously affect the remote control distance.