Typical base as below:

20.50 mm

Wall Mounted Touch Panel

Model No.: T21-1, T22-1, T24-1

4 Zone/1-4 color/Glass touch panel/Color wheel/Wireless remote 30m distance/AAA x 2 battery







4 Zone RGB/RGBW

CE RoHS EMC IVD RED

Features

• Touch panel 4 zone 1-4 color RF remote.

4 Zone dimming

- Each zone can remote control multiple Skydance's 2.4G LED controllers.
- Ultra sensitive high strength glass touch panel with touch color wheel in the middle.
- Smooth and accurate color adjustment by touching the color slide.
- Touch keys with chord tones and LED indicator.
- Free installation, no wiring, removable.
- AAA x 2 battery powered.
- White & Black glass panel available.

Technical Parameters


Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(AAA x 2)
Working current	< 5mA(Without tune)
	< 20mA(with tune)
Standby current	< 20µA
Standby time	1 year
Remote distance	30m (Barrier-free space)

Warranty	
Warranty	5 years


Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Environment	
Operation temperature	Ta: -30°C ~ +55°C
Case temperature (Max.)	Tc:+65°C
IP rating	IP20

Mechanical Structures and Installations

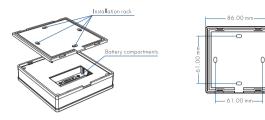

Installation diagram:

 

To fix the panel, two options are offered for selection:

Option 1: fix it on the wall with two screws.

Option 2: adhere it to the wall with paster.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press zone key of the touch panel.

The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match.
The LED indicator fast flash a few times
means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power of the receiver, then switch on power, repeat again.

Immediately short press zone key 3 times on the touch panel.

The light blinks 3 times means match is successful.

Delete:

Switch off the power of the receiver, then switch on power, repeat again.

Immediately short press zone key 5 times on the touch panel.

The light blinks 5 times means all matched remotes were deleted.

User Manual Ver 1.0.5

Key function

T21-1 Single color panel



Brightness, 10 levels.

Brightness wheel.

1 2 3 4

Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light. 4 zone control seperately or synchronously, each zone could control multiple receivers.

T22-1 Dual color panel



Brightness, 10 levels.

Color temperature wheel.

1 2 3 4

Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light.

4 zone control seperately or synchronously, each zone could control multiple receivers.

T24-1 RGBW panel



() — Turn on/off all zone light.

Color wheel.

M — Short press play 10 built-in mode, long press 2s run mode-cycle.

Adjust dynamic mode speed or static color brightness, 10 levels.

R G B W Short press get red, green, blue, white color, long press adjust each color brightness.

1 2 3 4

Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light. 4 zone control seperately or synchronously, each zone could control multiple receivers.

Note: After touch power key to turn off light, long press power key for 5 seconds will turn on or turn off tone.

Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity.
 A long time without the remote control, remove the battery.
 When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

User Manual Ver 1,0.5