

## Intelligent Tunable White LED Driver (Constant Current)

- The housing is made from V0 flame retardant PC materials from SAMSUNG/COVESTR0.
- Ultra-small, thin and light screwless end cap.
- Change the output current, fade time and other parameters on the NFC programmer or via the App, and sync the parameters to the driver.
- Set the output current down to 1mA.
- With soft-on and fade-in dimming function, enhancing your visual comfort.
- T-PWM<sup>TM</sup> Super depth dimming technology, dimming depth can reach 0.0001% Flicker Free
- The whole dimming process is flicker-free with high frequency exemption level.  $\ensuremath{\mathsf{IEEE\,1789}}$
- Comply with the EU's ErP Directive, networked standby<0.5W.
- When there is no load, the output will be 0V to prevent damage to LEDs due to poor contact.
- Overheat, over voltage, overload, short circuit protection and
- automatic recovery.
- Suitable for Class | / || / ||| indoor light fixtures.
- Normal service life can reach 100,000 hours.
- 5-year warranty (Rubycon capacitor)




# Technical Specs

Model		SE-12-1	00-500-W2M				
	Output Type	Constant					
Features	Dimming Interface	DMX512/					
	Output Feature	Isolation					
	Protection Grade	IP20					
	Insulation Grade	Class II (Suitable for class I/ II /III light fixtures)					
	Output Voltage	9-42Vdc					
OUTPUT	Maximum output voltage	9-42V0C ≤48Vdc					
	Output Current Range	≤48V0C 100-500mA					
	Output Power Range	0.9W-12W					
	Dimming Range	0~100%, down to 0.01%					
	LF Current Ripple	<3%[Maximum current for non dimming state]					
	Current Accuracy	±5%					
	PWM Frequency	≤3%00Hz					
	DC Voltage Range	120-250Vdc					
	AC Voltage Range	100-240Vac					
		115Vac/230Vac					
	Input Voltage	50/60Hz					
	Frequency	50/60Hz <0.18A/115Vac, <0.08A/230Vac					
	Input Current Power Factor						
INPUT	THD	PF>0.95/115Vac (at full load), PF>0.9C/230Vac (at full load) THD<10%/230Vac, at full load					
	Efficiency (Typ.)						
	Inrush Current	84%@300mA(at full load), 82%@500mA(at full load)					
	Anti Surge	Cold start 15A(Test twidth=102us tested under 50% lpeak)/230Vac					
	Leakage Current	L-N: 2KV Max. 0.5mA					
	Working Temperature						
		ta: -20 ~ 50°C tc: 80°C					
ENVIRONMENT	Working Humidity Storage Temperature/Humidity	20 ~ 95%RH, non-condensing					
ENVIRONMENT							
	Temperature Coefficient	±0.03%/°C[0-50°C]					
	Vibration	10~500Hz, 2G 12min/1cycle, 72 min for X, Y and Z axes respectively					
	Overload Protection	Automatically protect the device when the load exceeds 102% of the rated power. Automatically recover once load is reduced					
PROTECTION	Overheat Protection	Intelligently adjust or turn off the current output if the PCB temperature >110°C.					
	Overvoltage Protection	Automatically protect the device when voltage exceeds the no-load voltage. It can be recovered automatically					
	Short Circuit Protection	Enter hiccup mode if short circuit occurs, and recover automatically					
	Withstand Voltage	I/P-0/P: 3750Vac I/P-0/P: 100MΩ/500VDC/25°C/70%RH					
	Insulation Resistance	CCC					
	Safety Standards	TUV	China	GB19510.1, GB19510.14			
		CB	Germany CB Member States	EN61347-1, EN61347-2-13, EN62493			
		CE	European Union	IEC61347-1, IEC61347-2-13 EN61347-1, EN61347-2-13, EN62384			
		KC		KC61347-1, KC61347-2-13			
		EAC	Korea Russia	IEC61347-1, IEC61347-2-13			
		RCM	Australia				
				AS 61347-1, AS 61347-2-13			
SAFETY		ENEC	Europe	EN61347-1, EN61347-2-13, EN62384 BS EN 61347-1, BS EN 61347-2-13, BS EN 62493			
EMC		UKCA BIS	Britain India	BS EN 61347-1, BS EN 61347-2-13, BS EN 62493 IS 15885 (PART 2/SEC 13)			
		CUL	Canada	CSA C22.2 N0.250.13			
		UL	America	UL 8750			
	EMC Emission	CCC	China	GB/T17743, GB17625.1			
		CE	European Union	EN55015, EN61000-3-2, EN61000-3-3, EN61547			
		KC	Korea	KSC 9815, KSC 9547			
		EAC	Russia	IEC62493, IEC61547, EH55015			
		RCM	Australia	EN55015, EN61000-3-2, EN61000-3-3, EN61547			
		UKCA	Britain	BS EN IEC 55015, BS EN IEC 61000-3-2, BS EN 61000-3-3, BS EN 61547			
		CUL	Canada	ICES-005			
		UL	America	FCC PART 15B			
	EMC Immunity	EN61000-4-2,3,4,5,6,8,11, EN6		51547			
	Power Consumption	Networked standby		<0.5W (After shutdown by command)			
ErP		No-load power consumption		<0.5W (When the lamp is not connected)			
		IEEE 1789		Meet IEEE 1789 standard/High frequency exemption level			
		CIE SVM		Pst LM<1.0, SVM<0.4			
	DF	Phase factor		DF>0.9			
	Weight(N.W.)	85g±10g		5, 6),			
OTHERS	-		20mm(L×W×H)				
OTTIERS	Dimensions	11(1×35~					




### Product Size

Unit: mm

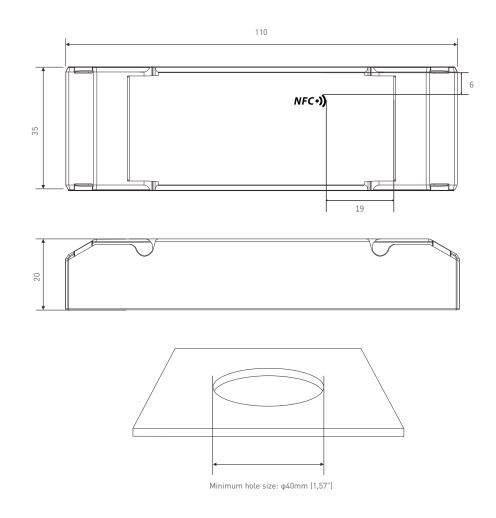

## Wiring Diagram

DMX/RDM Connection

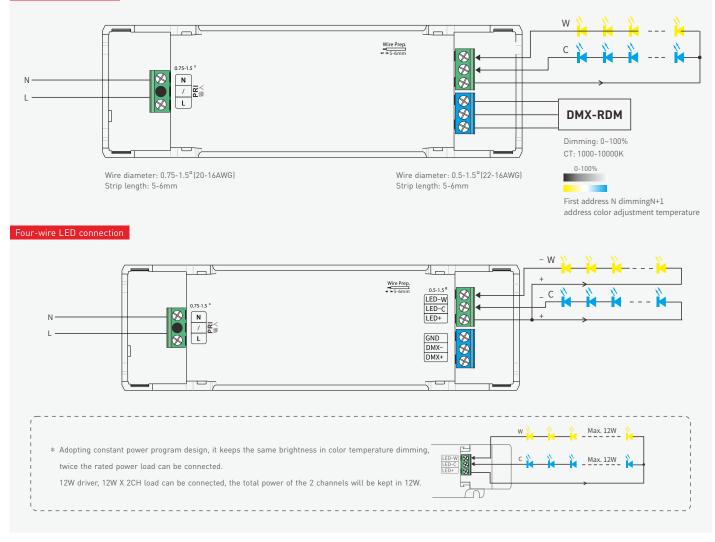



### Table of Typical Corresponding Parameters for Current

The typical 9 current data sets below are for reference when selecting LED fixture models. More current levels can be set by NFC using mobile APP with 100-500mA adjustable in 1mA step									
Output Current	100mA	150mA	200mA	250mA	300mA				
Output Voltage	9-42Vdc	9-42Vdc	9-42Vdc	9-42Vdc	9-40Vdc				
Output Power	0.9-4.2W	1.35-6.3W	1.8-8.4W	2.25-10.5W	2.7-12W				
Output Current	350mA	400mA	450mA	500mA	/				
Output Voltage	9-34Vdc 9-30Vdc		9-27Vdc	9-24Vdc	/				
Output Power	3.15-11.9W	3.6-12W	4.05-12.15W	4.5-12W	/				

### Protective Housing Application Diagram



1. Use a tool to pry up the protective housing on the side panel.

2. Pry up the protective housing in the side plate position with a tool.



3. Connect to electrical wires with a screwdriver as wiring diagram shows.




4. Press down the tension plate to fix the the electrical wires.




DMX512/RDM

5. Close the protective housing.

### **Installation Precautions**



Please do not stack the products. The distance between two products should be >15cm so as not to affect heat dissipation or the lifetime of the products.

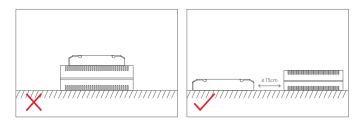

Please not place the products on power supplies. The distance between the product and the power supplies should be >15cm so as not to affect heat dissipation or shorten the lifetime of the products.

Note: The temperature within the installation area should be within the working temperature range of the products. Please do not install products inside LED fixtures to avoid temperature exceeding the working temperature that may affect the product lifetime.





## Use the NFC Lighting APP

Scan the QR code below with your mobile phone and follow the prompts to complete the APP installation (According to performance requirements, you need to use a NFC-capable Android phone, or an iphone 8 and later that are compatible with iOS 13 or higher).




\* Before you begin setting the parameters of the driver, please make sure the driver is powered off.

### Read/Write the LED driver

Use your NFC-capable phone to read LED driver data, then edit the parameters and they can be directly written to the driver.


#### 1. Read the LED driver

On the APP home page, click [Read/Write LED driver], then keep the programmer's sensing area close to the NFC logo of the driver to read the driver parameters.




#### 2. Switch the dimming interface


On the page of "Edit parameters", click [Dimming interfaces] to switch to the needed dimming interface: CT, DIM(1 address for 1 channel / 1 address for 2 channels / 2 addresses for 2 channels).



1 address for 1 channel



1 address for 2 channels




2 addresses for 2 channels

#### 3. Edit the parameters

Click [Parameter settings] to edit the advanced parameters, like output current, DMX address, brightness range, power-on fading time, etc.

#### 4. Write to the driver


After completing the parameter settings, click [Write] in the upper right corner, and keep the programmer's sensing area close to the NFC logo of the driver, so the parameters can be written to the driver.

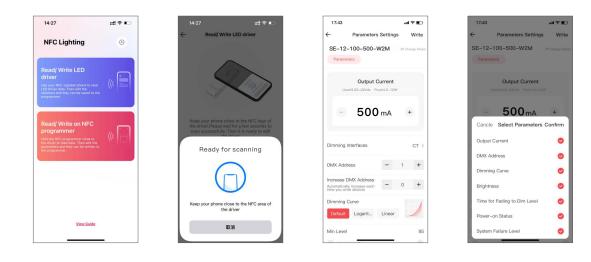



## Use with RDM Editor

The DMX driver can work with the address editor that complies with standard RDM protocol. It is recommended to use LTECH's RDM editor (model WiFi-RDM01), which can achieve more functions such as remote browsing and parameter setting. Wiring diagram as below:

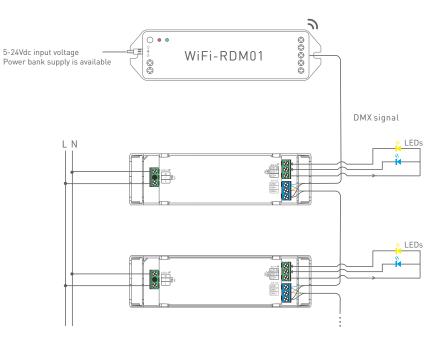

st the defaulted DMX address of the driver is 1.



## LTECH RDM editor App interface instruction

Download the App, setting the parameters after well connecting the RDM editor, please check the manual of WiFi-RDM01 for more details.





a: Click "Add", edited the address in corresponding box.

b: Click "ID", get more product details.

c: Click " 🐵 ", enter setting interface.


d: Click "No.", issue the recognizing command.


Test


DMX address setting




### **Relationship Diagrams**

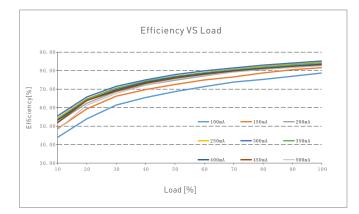


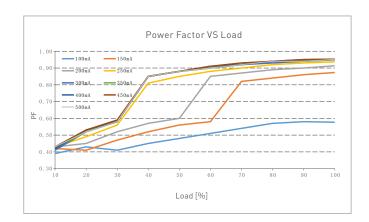

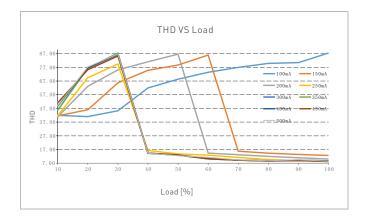

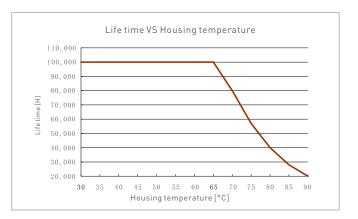

SE-12-100-500-W2M

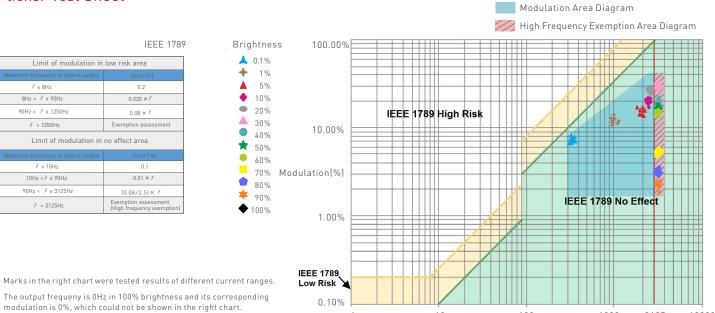

0.10%

1

6

Flicker Test Sheet

10

100

Frequency(Hz)

1000

3125

10000





## Packaging Specifications

Model	SE-12-100-500-W2M	
Carton Dimensions	260×240×215mm(L×W×H)	
Quantity	20 PCS/Layer; 5 Layers/Carton; 100 PCS/Carton	
Weight	0.095 kg/PC; 9.5 kg±5%/Carton	

# Packaging Image



Inner Packaging Box



Carton Packaging



### Transportation and Storage

### 1. Transportation

Products can be shipped via vehicles, boats and planes.

During transportation, products should be protected from rain and sun. Please avoid severe shock and vibration during the loading and unloading process.

2. Storage

The storage conditions should comply with the Class I Environmental Standards. The products that have been stored for more than six months are recommended to be re-inspected and can be used only after they have been qualified.

### Attentions

- This product must be installed and adjusted by a qualified professional.
- LTECH products are and not lightningproof non-waterproof (special models excepted). Please avoid the sun and rain. When installed outdoors, please ensure they are mounted in a water proof enclosure or in an area equipped with lightning protection devices.
- Good heat dissipation will extend the life the product. Please install the product in a environment with good ventilation.
- When you install this product, please avoid being near a large area of metal objects or stacking them to prevent signal interference.
- Please keep the product away from a intense magnetic field, a high pressure area or a place where lightning is easy to occur.
- Please check whether the working voltage used complies with the parameter requirements of the product.
- Before you power on the product, please make sure all the wiring is correct in case of incorrect connection that may cause a short circuit and damage the components, or trigger a accident.
- If a fault occurs, please do not attempt to fix the product by yourself. If you have any question, please contact the supplier.
- \* This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.

### Warranty Agreement

- Warranty periods from the date of delivery: 2 years.
- Free repair or replacement services for quality problems are provided within warranty periods.
- Warranty exclusions below:
- Beyond warranty periods.
- Any artificial damage caused by high voltage, overload, or improper operations.
- Products with severe physical damage.
- Damage caused by natural disasters and force majeure
- Warranty labels and barcodes have been damaged.
- No any contract signed by LTECH.

1. Repair or replacement provided is the only remedy for customers. LTECH is not liable for any incidental or consequential damage unless it is within the law.

2. LTECH has the right to amend or adjust the terms of this warranty, and release in written form shall prevail.





Version	Updated Time	Update Content	Updated by
AO	20231028	Original version	Yang Weiling