Intelligent Tunable White LED Driver (Constant Current)

- Housing made of Covestro/Samsung PC flame-retardant V0 raw material, ultra-thin and lightweight, tool-free screwless end cover for easy installation and removal.
- Matter certified device, communicates over IPv6 Thread network and requires a Matter hub with Thread Border Router functionality (such as Apple HomePod mini or Google Nest Hub).
- Supports control via mainstream Matter smart home platforms including Apple Home, Google Home, etc., with voice control support.
- Easy pairing and commissioning via QR code scanning.
- Supports standard Matter OTA updates.
- Supports NFC programming to adjust parameters including output current, dimming fade time, power-on fade time, brightness range, CT range, etc.
- T-PWM ultra-deep dimming technology with dimming depth down to 0.0001%.
- 0–100% full-range dimming with no visible flicker, compliant with high-frequency exemption level.
- Built-in soft start and gradual brightening for more comfortable visual experience.
- EU ERP compliant: no-load power consumption and network standby power consumption < 0.5W.
- No-load protection to prevent LED damage from poor contact.
- Over-temperature, overload and short-circuit protection with automatic recovery.
- Suitable for indoor Class I, II and III lighting applications.
- Service life up to 100,000 hours under normal operation.
- 5-year warranty (equipped with Ruby capacitors).

matter

DIM/CT

T-PWM
Dimming Technology

Flicker Free
IEEE 1789

Dimmable:
1:1000000

NFC



E497951

The certification icon represents undergoing certification applications only, and final certification qualification subject to actual product.

Multi current setting

Constant power setting

Overheat Protection

Over voltage protection

Over Load protection

Short circuit protection

Technical Specs


Model				
		SE-20-100-700-W2MA		
FEATURES	Output Type	Constant current		
	Dimming Interface	Matter over Thread, Matter 1.4		
	Output Feature	Isolation		
	IP Rating	IP20		
	Insulation Class	Class II (Suitable for class I/II/III light fixtures)		
OUTPUT	Output Voltage	9-42V ⎓		
	Max. Output Voltage	≤48V ⎓		
	Rated Current Range	100-700mA(Set higher current via mobile APP NFC; step value down to 1mA; Default: 100mA)		
	Load Power Range	0.9W-20W		
	Dimming Range	0-100%，Dimming depth: 0.0001% (Set additional gear ratios via the mobile app's NFC feature,Default:0.01%)		
	LF Current Ripple	<3%(Maximum current for non dimming state)		
	Current Accuracy	±5%		
	PWM Frequency	≤3600Hz		
INPUT	DC Voltage Range	100-240V⎓		
	AC Voltage Range	100-240V~		
	DC Current Range	0.09-0.25A		
	Rated Voltage	115V~ /230V~		
	Frequency	0/50/60Hz		
	Input Current	≤0.25A/115V~，≤0.13A/230V~		
	Power Factor	PF>0.95/115V~ (Fully loaded)，PF>0.9C/230V~ (Fully loaded)		
	THD	THD≤10%/230V~ (Fully loaded)		
	Efficiency(Typ.)	84%@700mA (Fully loaded) ,87%@500mA (Fully loaded)		
	Inrush Current	Cold start 15A(Test twidth=102us tested under 50% Ipeak)/230V~		
	Anti Surge	L-N: 2KV		
	Leakage Current	Max. 0.24mA		
ENVIRONMENT	Operating Temperature	ta: -20 ~ 50℃ tc: 80℃		
	Working Humidity	20 ~ 95%RH, non-condensing		
	Storage Temperature/Humidity	-40 ~ 80℃/10~95%RH		
	Temperature Coefficient	±0.03%/℃(-20-45℃)		
	Vibration	10-500Hz, 2G 12min/1cycle, 72 min for X, Y and Z axes respectively		
PROTECTION	Overload Protection	Automatically protect the device when the load exceeds 102% of the rated power. Automatically recover once load is reduced		
	Overheat Protection	Intelligently adjust or turn off the current output if the PCB temperature ≥110℃. When the PCB temperature <90℃, automatically recover normal output		
	Overvoltage Protection	Automatically protect the device when voltage exceeds the no-load voltage. It can be recovered automatically		
	Short Circuit Protection	Enter hiccup mode if short circuit occurs, and recover automatically		
SAFETY & EMC	Withstand Voltage	I/P-O/P: 3750V~		
	Insulation Resistance	I/P-O/P: 100MΩ/500VDC/25℃/70%RH		
	Safety Certifications	CCC	China	GB19510.1，GB19510.14，GB19510.213
		CB	CB Member States	IEC61347-1，IEC61347-2-13
		CE	European Union	EN61347-1，EN61347-2-13，EN62384
		CUL	Canada	CSA C22.2 No.250.13
		UL	United States	UL 8750
	EMC Emission	CCC	China	GB/T17743，GB17625.1
		CE	European Union	EN55015，EN61000-3-2，EN61000-3-3，EN61547
		CUL	Canada	ICES-005
		UL	United States	FCC part 15B
ErP	EMC Immunity	EN61000-4-2,3,4,5,6,8,11，EN61547		
	Power Consumption	Networked standby	< 0.5W(After shutdown by command)	
		No-load power consumption	< 0.5W (When the lamp is not connected)	
	Flicker/Stroboscopic Effect	IEEE 1789	Meet IEEE 1789 standard/High frequency exemption level	
		CIE SVM	Pst LM≤1.0，SVM≤0.4	
	DF	Phase factor	DF≥0.9	
OTHERS	Weight(N.W.)	110g±10g		
	Dimensions	127×40×23mm(L×W×H)		

Typical Current Corresponding Parameter Table


The following 13 groups of typical current data are provided for model selection reference. More currents can be set via the mobile phone APP NFC. The settable range is 100-700mA, and the current step value can be as low as 1mA.							
Output Current	**100mA**	**150mA**	**200mA**	**250mA**	**300mA**	**350mA**	**400mA**
Output Voltage	9-42Vdc	9-42Vdc	9-42Vdc	9-42Vdc	9-42Vdc	9-42Vdc	9-42Vdc
Output Power	0.9-4.2W	1.35-6.3W	1.8-8.4W	2.25-10.5W	2.7-12.6W	3.15-14.7W	3.6-16.8W
Output Current	**450mA**	**500mA**	**550mA**	**600mA**	**650mA**	**700mA**	/
Output Voltage	9-42Vdc	9-40Vdc	9-37Vdc	9-34Vdc	9-31Vdc	9-28.5Vdc	/
Output Power	4.05-18.9W	4.5-20W	4.95-20.35W	5.4-20.4W	5.85-20.15W	6.3-19.95W	/

Product Size

Unit：mm

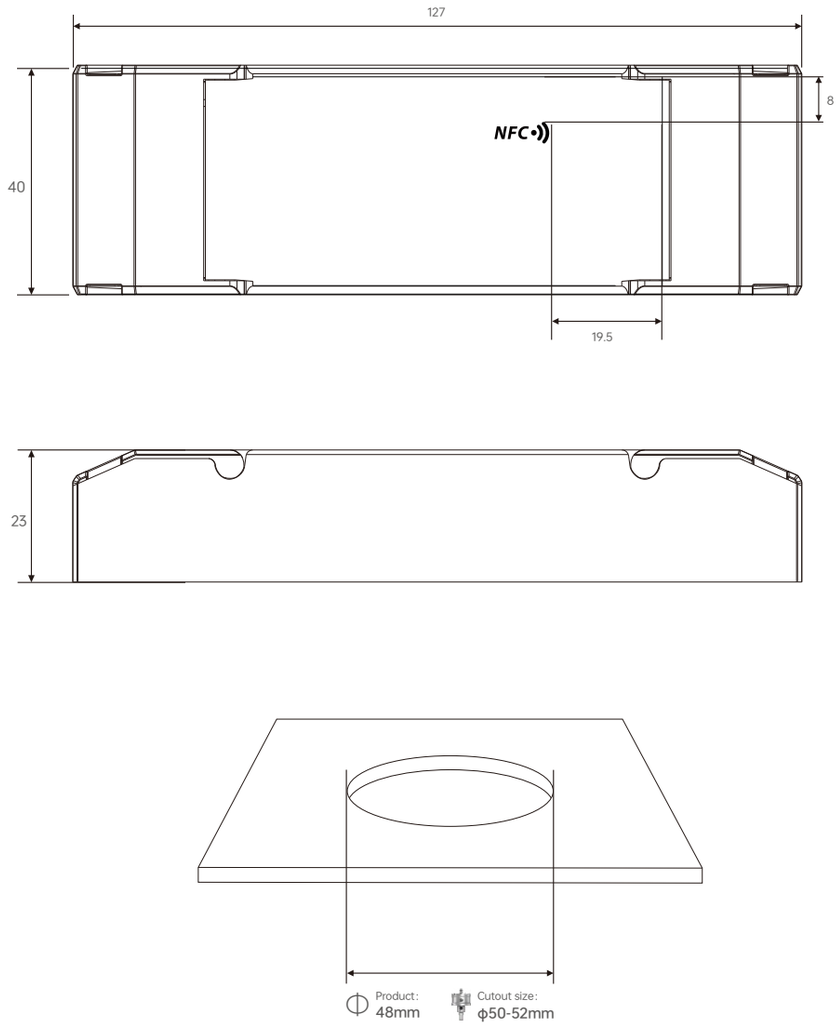

Connectivity Diagram

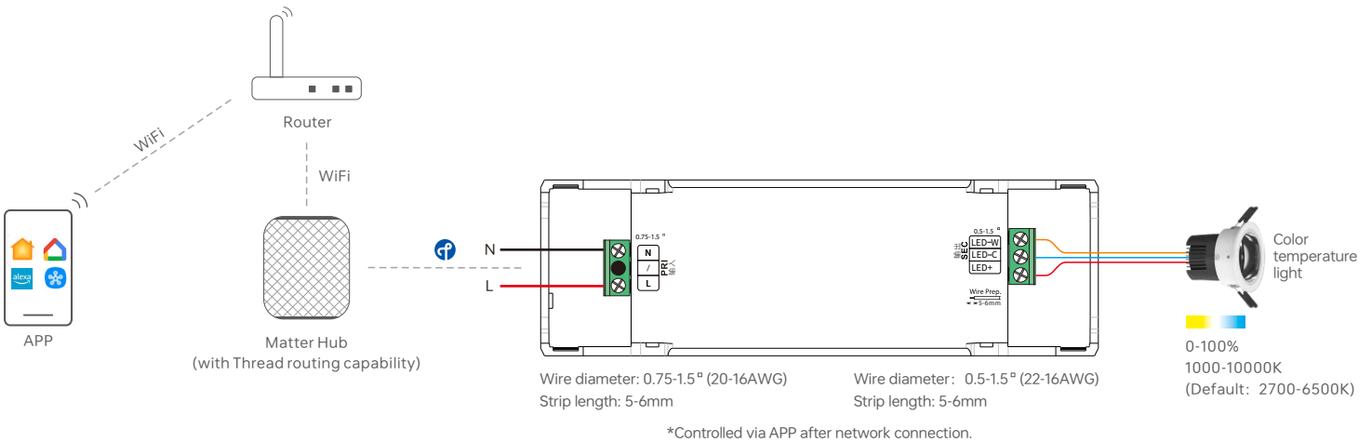

Wire diameter: 0.75-1.5²(20-16AWG)
Strip length: 5-6mm

Wire diameter: 0.5-1.5²(22-16AWG)
Strip length: 5-6mm

*Controlled via APP after network connection.

Application Diagram of Protective Cover




1. Put the head of a screwdriver on the side of the housing to pry up both the protective cover and wire fixing board. Then remove the wire fixing board and connect to the wires as wiring diagram shows.




2. Install the wire fixing board and press it down. Then snap on the protective cover while pressing the wire fixing board with a small flat-head screwdriver


Installation Precautions

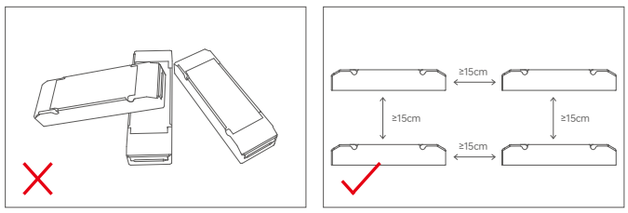


Please do not stack the products. The distance between two products should be ≥15cm so as not to affect heat dissipation and the lifespan of the products.

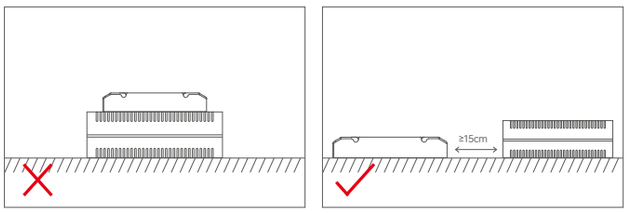


Please do not place the products on the floor. The distance between the product and the floor should be ≥100cm so as to avoid signal interference.

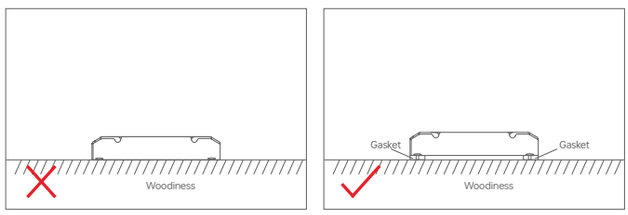


Do not fix the product tightly against the wooden board with screws. Please add a washer ≥7 mm thick under the mounting screws to leave a gap for effective heat dissipation, so as to avoid affecting the heat dissipation and service life of the product.

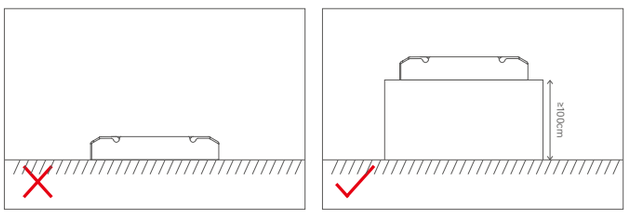

Please do not place the products on the floor. The distance between the product and the floor should be ≥100cm so as to avoid signal interference.

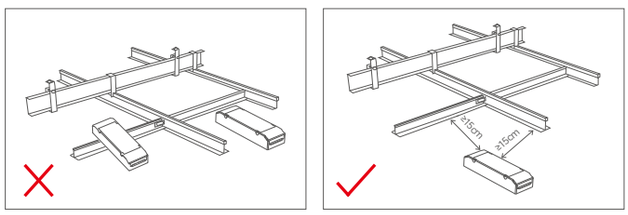



Do not allow the product to come into large-area contact with metal objects (e.g. keel frames). The separation distance shall be ≥15 cm to avoid signal interference affecting operation.

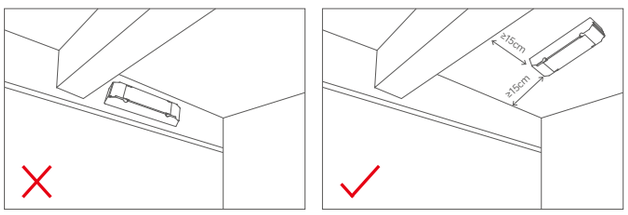



Please do not install the products on beams or near the corners. The distance between the product and the beam or the corner should be ≥15cm so as to avoid signal interference.

Relationship Diagrams

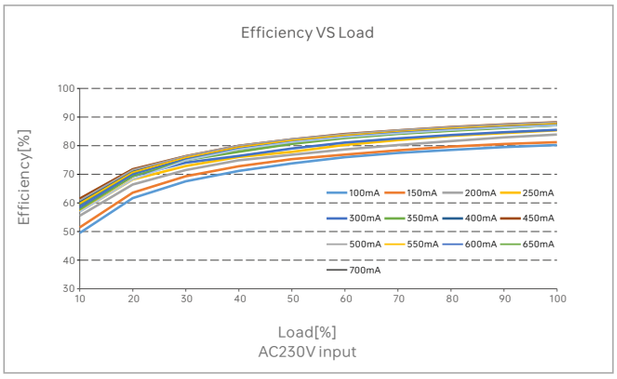

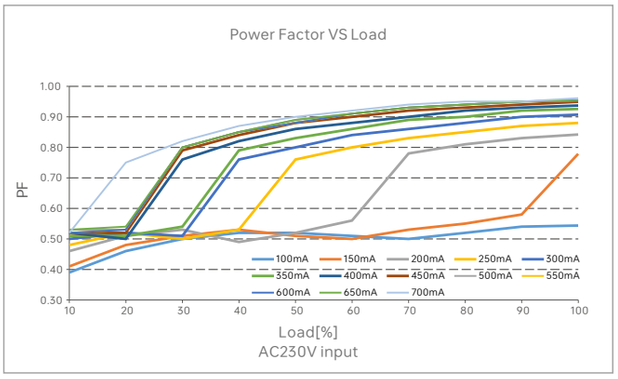

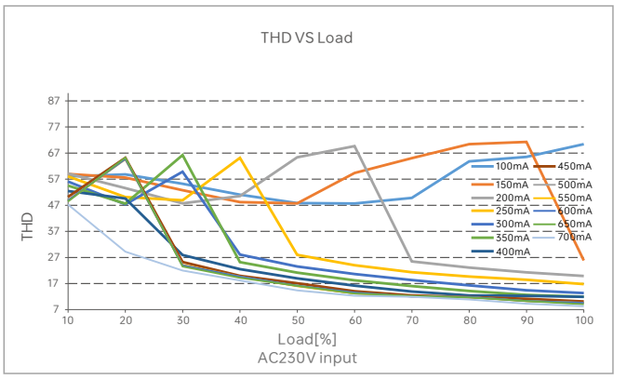

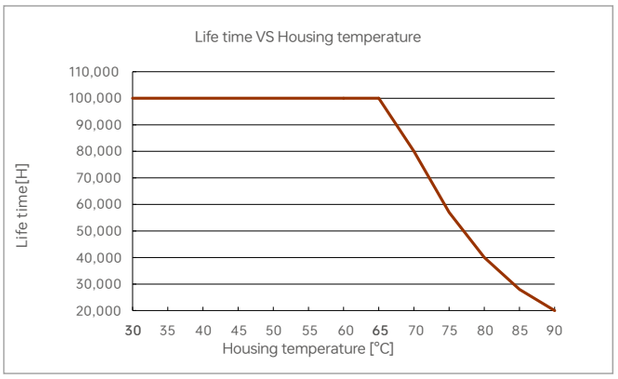


SE-20-100-700-W2MA

Flicker Test Sheet

IEEE 1789

Limit of modulation in low risk area	
Waveform frequency of optical output	limit (%)
$f \leq 8Hz$	0.2
$8Hz < f \leq 90Hz$	$0.025 \times f$
$90Hz < f \leq 1250Hz$	$0.08 \times f$
$f > 1250Hz$	Exemption assessment
Limit of modulation in no effect area	
Waveform frequency of optical output	limit (%)
$f \leq 10Hz$	0.1
$10Hz < f \leq 90Hz$	$0.01 \times f$
$90Hz < f \leq 3125Hz$	$(0.08/2.5) \times f$
$f > 3125Hz$	Exemption assessment (High frequency exemption)

Brightness
0.1%
1%
5%
10%
20%
30%
40%
50%
60%
70%
80%
90%
100%

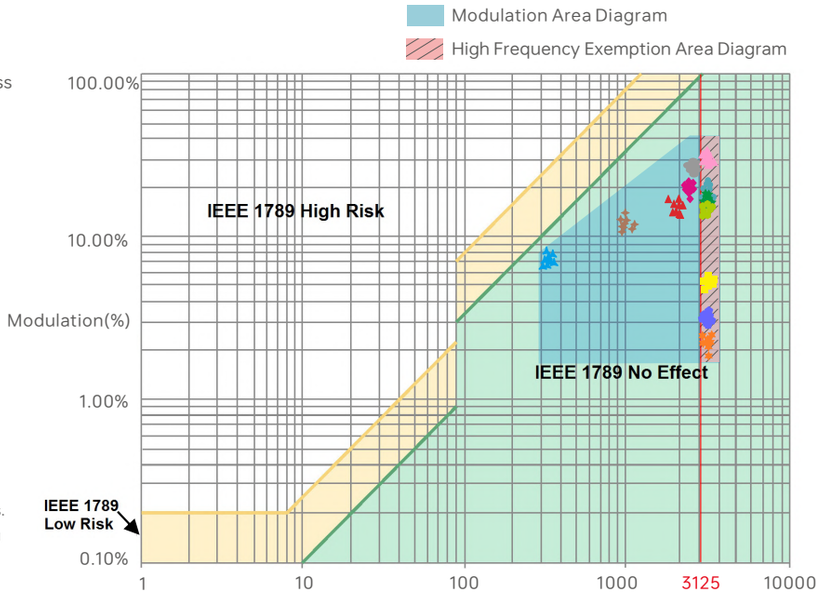

Marks in the right chart were tested results of different current ranges. The output frequeny is 0Hz in 100% brightness and its corresponding modulation is 0%, which could not be shown in the right chart.

Add to Matter Platform Instructions

1. This device supports control via major smart home platforms, including Apple Home, Amazon Alexa, Google Home, SmartThings, and others.
2. To connect Matter over Thread devices, you need a Matter hub supporting Thread border router functionality from major platforms. Refer to the image below for compatible models.

Apple Home	SmartThings	Google Home	Amazon Alexa
Apple HomePod (second-gen)	Aeotec SmartThings Smart Home Hub	Google Nest Hub (2nd Gen)	Amazon Echo (4th-gen)
Apple HomePod Mini	Samsung SmartThings Station	Google Nest Hub Max	Amazon Echo Hub
Apple TV 4K (2nd gen)	Samsung SmartThings Hub Dongle	Google Nest Wifi Pro	Amazon Echo Show 8 (3rd-gen)
Apple TV 4K (3rd gen,128 GB)	Samsung SmartThings Hub v3	Google TV Streamer (4K)	Amazon Eero 6, Pro 6, 6 Plus, Max 7 etc.


3. This guide uses Apple Home as an example. First, prepare an iPhone (iOS 16.2 or later) or iPad (iPadOS 16.2 or later) with the latest firmware, along with an Apple HomePod mini also running the latest firmware. Then connect your iPhone or iPad to your home Wi-Fi network, launch the Apple Home app, and follow Apple's instructions to set up the HomePod mini.
*For iPhone models 16 and above, no Matter hub is required; devices can be added directly.


Adding Steps (Using Apple Home as an Example)

1.Add Accessory

Open the Apple Home app, tap Add or Scan Accessory, and add the device to the Home app by scanning the QR code label on the device, as shown below.


*Alternatively, add via NFC: Open the Home app, bring it close to the device's NFC sensing area for recognition and network connection.

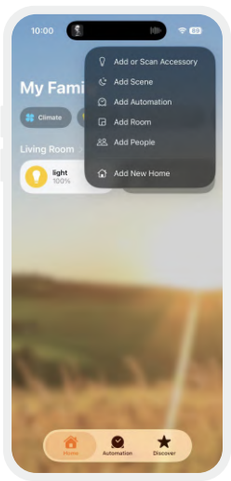


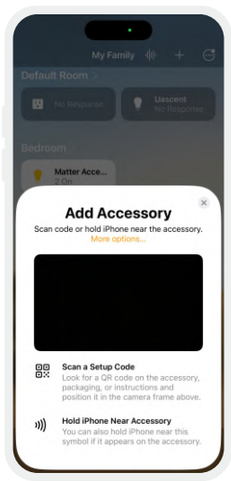

2.Control the Device


After the device has been successfully added, tap the device icon to turn it ON/OFF; tap the device card to enter the brightness and color temperature control interface.

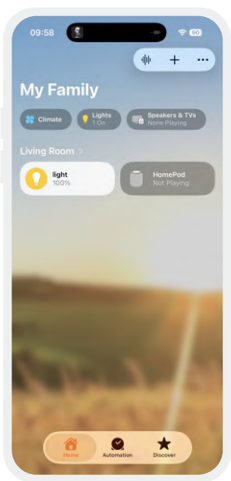


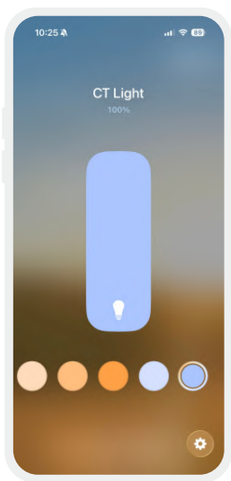

3. Advanced Functions


Supports creating groups, scenes, automation, remote control and timer control. The device can also be controlled via Siri voice commands.

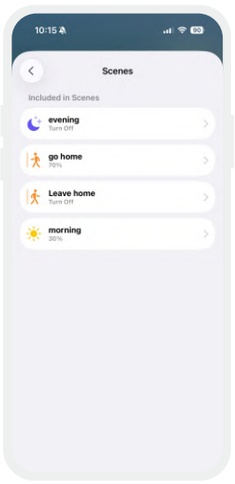


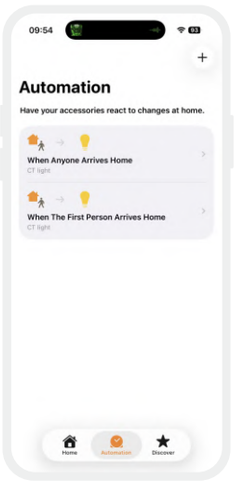

4.Multi-Ecosystem Network Configuration


If the product needs to be added to two or more ecosystems, you may go to the device settings page, tap Enable Pairing Mode, obtain the pairing code, and add it to third-party platforms.

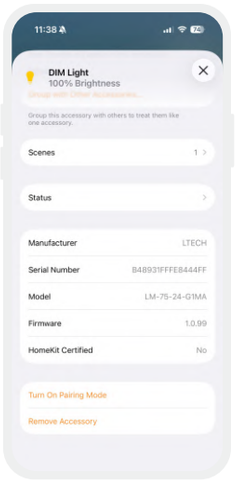

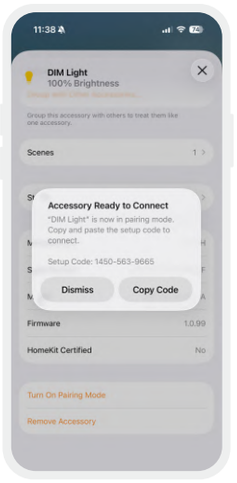

Reset to the defaults

Ensure the device is connected to the light and the light stays on steadily. Turn the power off and on 6 times in a row using the switch: (Turn off for 15 seconds, Turn on for 2 seconds)After the 6th time you turn it on (leave it on for 2 seconds), the light will flash 5 times. This means the device has been successfully restored to factory settings.



Turn it on 2s

Turn it off 15s

Under the driver being power-on

Turn it off —15s— Turn it on —2s— .....

(Repeat 6 times)

Use the NFC Lighting APP

Scan the QR code below with your mobile phone and follow the prompts to complete the APP installation (According to performance requirements, you need to use a NFC-capable Android phone, or an iphone 8 and later that are compatible with iOS 13 or higher).

∗ Before you begin setting the parameters of the driver, please make sure the driver is powered off .

Read/Write the LED driver


Use your NFC-capable phone to read LED driver data, then edit the parameters and they can be directly written to the driver.

1.Read the LED driver

On the APP home page, click【Read/Write LED driver】, then keep the programmer's sensing area close to the NFC sensing area of the driver to read the driver parameters.







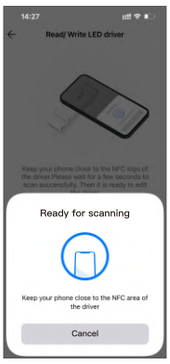


2.Edit the parameters

Click【Parameter settings】to edit more advanced parameters such as output current, dimming fade time, power-on fade time, Dimming Depth, brightness range, CT range, power-on state.

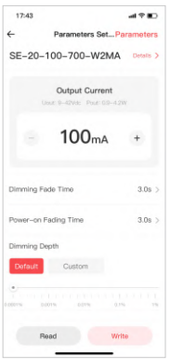


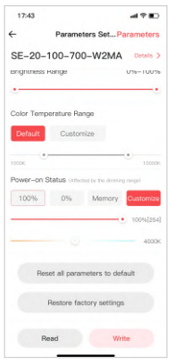

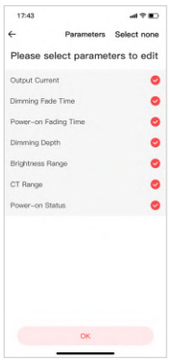

3.Write to the driver


After completing the parameter settings, click 【Write】in the upper right corner, and keep the programmer's sensing area close to the NFC sensing area of the driver, so the parameters can be written to the driver.

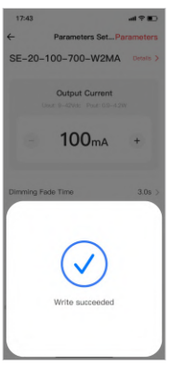

Packaging Specifications

Model	SE-20-100-700-W2MA
Carton Dimensions	372×355×105mm(L×W×H)
Quantity	32 PCS/Layer; 2 Layers/Carton; 64 PCS/Carton
Weight	0.11kg/PC; 7.4 kg±5%/Carton

Packaging Image

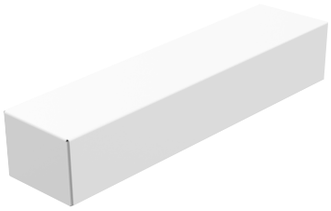

Inner Packaging Box



Carton Packaging

FAQ

This product is designed in compliance with the Matter protocol standard. As the protocol is still in the early stage of industry development and limited by the current version, some functions, performance and network connection stability may be subject to further optimization.
Product performance is subject to the current version of the Matter protocol. Our company will continuously upgrade and optimize product functions and performance in line with official updates. Please kindly note.

1. What should I do if the large number of Matter devices managed by the Matter hub gateway causes unstable connections and control?
1.1 It is recommended that each hub gateway add no more than 40 Matter devices.
1.2 It is recommended that the hub gateway remain powered on at all times; otherwise, the device reconnection time will be long.
1.3 Routers of different brands and performances have a certain impact on the number of devices managed by the Matter hub. It is recommended to choose a high-performance router.

2. What should I do if packet loss occurs during group control switching or dimming, and the app status flips back and forth?
It is recommended to keep the number of devices in a group within 10 units.

3. What should I do if the device goes offline and cannot recover after a long period of inactivity?
It is recommended to power the device off and on again to reconnect.

4. What should I do if adding the device still fails after restoring it to factory settings?
Please try powering the device off and on again before adding it.

5. Common reasons for failed device addition caused by router issues.
5.1 The router must have the IPv6 option enabled.
5.2 The router must have the "Brute-force network attack prevention" option disabled.
5.3 Do not connect to the guest Wi-Fi; connect to the main Wi-Fi network instead.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference.
(2)This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

Transportation and Storage

1. Transportation

Products can be shipped via vehicles, boats and planes.

During transportation, products should be protected from rain and sun. Please avoid severe shock and vibration during the loading and unloading process.

2. Storage

The storage conditions should comply with the Class I Environmental Standards. The products that have been stored for more than six months are recommended to be re-inspected and can be used only after they have been qualified.

Attentions

- Products shall be installed by qualified professionals.
- LTECH products are and not lightningproof non-waterproof (special models excepted). Please avoid the sun and rain. When installed outdoors, please ensure they are mounted in a water proof enclosure or in an area equipped with lightning protection devices.
- Good heat dissipation will prolong the working life of products. Please ensure good ventilation.
- Please check if the working voltage used complies with the parameter requirements of products.
- The diameter of wire used must be able to load the light fixtures you connect and ensure the firm wiring.
- Before you power on products, please make sure all the wiring is correct in case of incorrect connection that causes damage to light fixtures.
- If a fault occurs, please do not attempt to fix products by yourself. If you have any question, please contact your suppliers.

✻ This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.

Warranty Agreement

- Warranty periods from the date of delivery: 5 years.
- Free repair or replacement services for quality problems are provided within warranty periods.

Warranty exclusions below:

- Beyond warranty periods.
- Any artificial damage caused by high voltage, overload, or improper operations.
- Products with severe physical damage.
- Damage caused by natural disasters and force majeure.
- Warranty labels and barcodes have been damaged.
- No any contract signed by LTECH.

1. Repair or replacement provided is the only remedy for customers. LTECH is not liable for any incidental or consequential damage unless it is within the law.
2. LTECH has the right to amend or adjust the terms of this warranty, and release in written form shall prevail.