# **DIN-411-10A DALI LED Dimming Driver** (DIN Rail, screw dual-use)













LTECH developed a new DALI to PWM dimming driver which has solved the compatible problem of the fluorescent dimming system and the LED illumination. LED lamps can be controlled by many traditional intelligent dimming systems such as Lutron, Dynalite, Tridonic, Schneider, Clipsal, Osram, Philips, ABB, etc.

DIN-411-10A CV dimming driver adopts the latest DALI standard IEC62386(compatible with the old standard IEC60929), It can load Max 10A current, 12V can load max 120W, 24V can load max 240W.


# 1. Product Parameter:

### **DIN-411-10A DALI LED Dimming Driver**

- Input Signal: DALI Dimming Signal(IEC62386/IEC60929) Mounting: DIN Rail or Screw
- Input Voltage: DC12V~DC24V
- Output: 10A x1CH+0-10V x 1CH
- Max Output Power: 120W/240W(12V/24V)
- Dimming Range: 0-100%
- DIN Rail Mounting Size: TS-35/7.5 or TS-35/15

- Working Temperature: -30°C-55°C
- Dimensions: L112×W35×H67mm
- Package Size: L114×W37×H70mm
- Weight(G.W.): 120g

# 2. Product Dimension: 100mm DIN rail mounting size TS-35/7.5 or TS-35/15 DIN rail, screw dual-use **Conjunction Diagram:**




\*LED Voltage Chosen:


DALI Bus No Need Distinguish Plus-minus Polarity

### 1) Connection Diagram for Single Unit:


DALI




The power chosen must be 20% higher than the actual load. for example: you can choose 100W power for the white LED

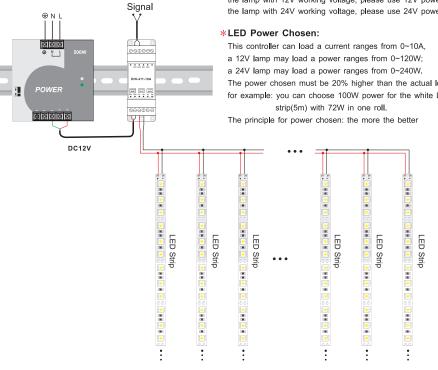

2) Connection Diagram for Multiple Units:

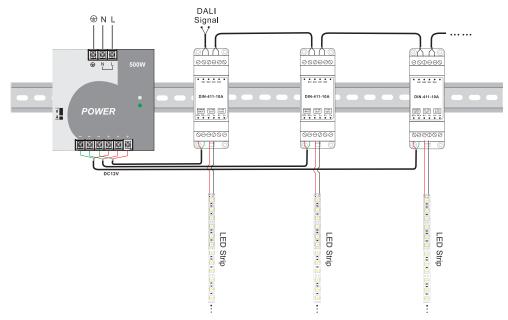

3) System Connection Diagram:

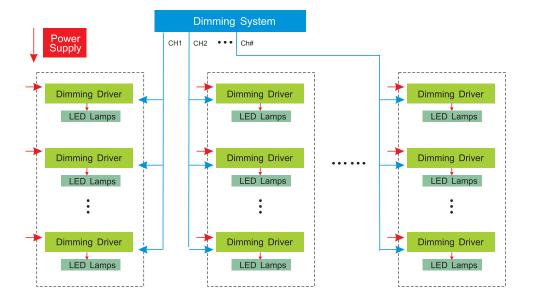

# 4. Attention:

- 1) The product shall be installed and serviced by a qualified person.
- This product is non-waterproof. Please avoid the sun and rain. When installed outdoors please ensure it is mounted in a water proof enclosure.
- 3) Good heat dissipation will prolong the working life of the controller. Please ensure good ventilation.
- 4) Please check if the output voltage of any LED power supplies used comply with the working voltage of the product.
- 5) Please ensure that adequate sized cable is used from the controller to the LED lights to carry the current.

  Please also ensure that the cable is secured tightly in the connector.
- 6) Ensure all wire connections and polarities are correct before applying power to avoid any damages to the LED lights.
- 7) If a fault occurs please return the product to your supplier. Do not attempt to fix this product by yourself.

# 5. Warranty Agreement:

- 1) We provide lifelong technical assistance with this product:
- A 5-year warranty is given from the date of purchase. The warranty is for free repair or replacement and covers manufacturing faults only.
- For faults beyond the 5-year warranty we reserve the right to charge for time and parts.
- 2) Warranty exclusions below:
- Any man-made damages caused from improper operation, or connecting to excess voltage and overloading.
- The product appears to have excessive physical damage.
- Damage due to natural disasters and force majeure.
- Warranty label, fragile label and unique barcode label have been damaged.
- The product has been replaced by a brand new product.
- 3) Repair or replacement as provided under this warranty is the exclusive remedy to the customer. LTECH shall not be liable for any incidental or consequential damages for breach of any stipulation in this warranty.
- 4) Any amendment or adjustment to this warranty must be approved in writing by LTECH only.
- ★ This manual only applies to this model. LTECH reserves the right to make changes without prior notice.

4