User Guide

4 Channel 0/1-10V LED Dimming Controller


Summary

- 4 channel 0/1-10V LED dimming controller with push-dimming function.
- 4 channel 0/1-10V input, 4 channel PWM constant voltage output.
- 0~100% dimming range via logarithmic characteristic can be very comfortable for human eyes.
- Smooth dimming without any flickering.
- Compatible with active or passive 0-10V, 1-10V access dimmer, can solve the fluorescent lamp dimming system compatible with LED lighting.
- 0/1-10V CV LED dimming controller can connect unlimited number of CV or CC power repeaters in series
 or in parallel to expand output power, achieve synchronous control effect.


Technical parameter

Model	Name	Input voltage	Output current	Output power	Output type
L4-L	4CH 0/1-10V and Push-dim CV dimming controller	12-36VDC	4CH,5A/CH	4x(60-180)W	Constant voltage


Dimension



Interface specification



Wiring diagram

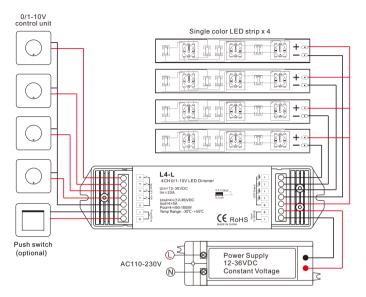

Push switch function

- 1. Short press: Turn on/off all 4 channel light.
- Long press(1-5s): When light is on, increase or decrease brightness continuously, adjust 4 channel brightness at the same time.

Power supply select guide

- 12V lamp, Input 12V power supply, can load 0~240W,
- 24V lamp, Input 24V power supply, can load 0~480W,
- 36V lamp, Input 36V power supply, can load 0~720W,
 The power supply power must larger than load power 20%.

Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting	
No light	No power. Wrong connection or insecure.	Check the power. Check the connection.	
Uneven intensity between front and rear, with voltage drop	Output cable is too long. Wire diameter is too small. Overload beyond power supplycapability. Overload beyond controller capability.	Reduce cable or loop supply. Change wider wire. Replace higher power supply. Add power repeater.	

Safety information

- 1. The product shall be installed and serviced by a qualified person.
- 2. This product is non-waterproof. Please avoid the sun and rain.
- 3. Good heat dissipation will prolong the working life of the controller, please ensure good ventilation.
- 4. Please check if the output voltage of any power supplies used comply with the working voltage of the product.
- Ensure all wire connections and polarities are correct and secure before applying power to avoid any damages to the LED lights.
- 6. If a fault occurs please return the product to your supplier. Do not attempt to fix this product by yourself.