SE-20-250-1000-W2B2

Intelligent Tunable White LED Driver (Constant Current)

Flicker-free IEEE 1789

- Adopt SAMSUNG/COVESTRO V0 flame resistant polycarbonate protective housings with small size and light weight.
- Bluetooth 5.0 Mesh with high networking capability are reliable and stable.
- Adjust brightness levels when lights are tunred on or go to the brightness level adjusted last time.
- T-PWM[™]dimming technology allows continuous and flicker-free images under high-speed shooting.
- 0-100% flicker-free dimming with high frequency exemption level.
- Dimming from 0~100%, down to 0.01%.
- Innovative thermal management technology protects the power life intelligently.
- Overheat, overvoltage , overload, short circuit protection and automatic recovery.
- Suitable for indoor light applications of I/II/III type
- Up to 50000-hour life time.
- 5 -year warranty (Rubycon capacitor).



Technical Specs

T-PWM

Super depth mming technole

| Model | | SE-20-250-1000-W2B2 |
|-------------|------------------------------|---|
| | Control mode | Push DIM |
| | Output voltage | 9-54Vdc |
| | Max output voltage | 59Vdc |
| | Output current | 250-1000mA |
| INPUT | Strobe level | No visible flicker/High frequency exemption level |
| | Dimming range | 0~100%, down to 0.1% |
| | LF current ripple(<120Hz) | <1% |
| | Current accuracy | ±5% |
| | Ripple&noise | ≤2V |
| | PWM dimming frequency | ≤3600Hz |
| | Wireless protocol type | Bluetooth 5.0 Mesh |
| | Input voltage | 100-240Vac (120-300Vdc) |
| | Frequency | 0/50/60Hz |
| | Input current | 115Vac≤0.25A, 230Vac≤0.13A |
| OUTPUT | Power factor | PF>0.95/115Vac , PF>0.90/230Vac(Full load) |
| | Efficiency (Typ) | 83% |
| | Inrush current | Cold start10A@230Vac (Test twidth=40 us tested under50% peak)twidth=40us) |
| | Anti surge | L-N: 2kV |
| | Leakage current | <0.24mA/230Vac |
| | Working temperature | ta: -20 ~ 50°C tc: 75°C |
| | Working humitdity | 20 ~ 95%RH, non-condensing |
| ENVIRONMENT | Storage temperature/Humidity | -40 ~ 80°C, 10~95%RH |
| | Temp coefficient | ±0.03%/°C(0-50°C) |
| | Vibration | 10-500HZ, 2G 12min/1cycle , 72 min for X,Y and Z axes respectively. |
| | Overvoltage protection | Shut down the output and recover automatically once it exceeds no-load voltage. |
| PROTECTION | Overload protection | Shut down the output and recover antomatically once it exceeds1.02 times of the max load power. |
| PROTECTION | Overheat protection | Intelligently adjust or turn off the output current if the PCB temperature \ge 110°C,and recover automatically. |
| | Short circuit protection | When short circuit occurs, shut down the output and recover automatically. |
| | Withstand voltage | I/P-0/P:3750Vac |
| | Insulation resistance | I/P-0/P:500VdC/25°C/70%RH≥100MΩ |
| SAFETY & | Safety standards | IEC/EN61347-1, IEC/EN61347-2-13 |
| EMC | EMC emission | EN55015, EN61000-3-2 Class C, IEC61000-3-3 |
| | EMC immunity | EN61000-4-2,3,4,5,6,8,11, EN61547 |
| | Strobe test standard | IEEE 1789 |
| | Dimensions(L×W×H) | 167×41×32mm(L×W×H) |
| OTHERS | Package size(L×W×H) | 168×43×35mm(L×W×H) |
| | Gross weight | 160g±10g |

X



RoHS



0

CE





DIPswite

LED Current Selection


* DIP switch quickly selects multiple current value(See the table below).

st Please set current value when the driver is power-off.

| | DIP Switch | | 111 7 | 1171 | **** | 1711 | 474T | 1771 | 1 T T T | |
|---------------------|----------------|-----------------------|--------------|-------------|---------|-------------|---------------|-------------|-----------|----------|
| | Output Current | 250mA | 300mA | 350mA | 400mA | 450mA | 500mA | 550mA | 600mA | |
| | Output Voltage | 9-54V | 9-54V | 9-54V | 9-50V | 9-45V | 9-40V | 9-37V | 9-34V | |
| SE-20-250-1000-W2B2 | Output Power | 2.25-13.5W | 2.7-16.2W | 3.15-18.9W | 3.6-20W | 4.05-20.25W | 4.5-20W | 4.95-20.35W | 5.4-20.4W | T |
| | DIP Switch | $T \perp \perp \perp$ | TLLT | TATA | TLTT | TTLL | $T T \perp T$ | TTTA | TTTT | ON |
| | Output Current | 650mA | 700mA | 750mA | 800mA | 850mA | 900mA | 950mA | 1000mA | OFF |
| | Output Voltage | 9-31V | 9-29V | 9-27V | 9-25V | 9-24V | 9-22V | 9-21V | 9-20V | |
| | Output Power | 5.85-20.15W | 6.3-20.3W | 6.75-20.25W | 7.2-20W | 7.65-20.4W | 8.1-19.8W | 8.55-19.95W | 9-20W | |


Product Size

Unit : mm

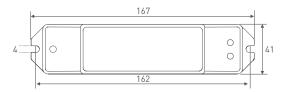



Wiring Diagram

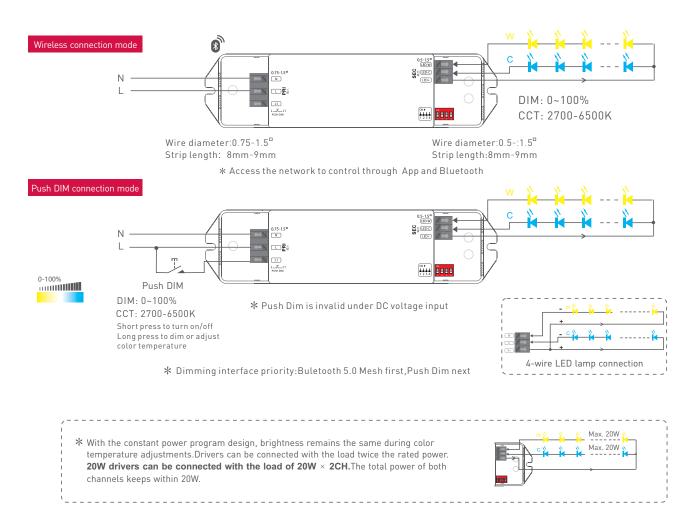




Push DIM/CT



Reset switch

- On/off control: Short press .
- Stepless dimming: Long press.
- With every other long press, the brightness level goes to the opposite direction.
- Dimming memory: Go to the brightness level adjusted previously when lights are turned on.
- * Push DIM works when the driver didn't be paired up with a remote or gateway. If it did, please remove the paired driver from the remote or gateway.

Relationship Diagrams

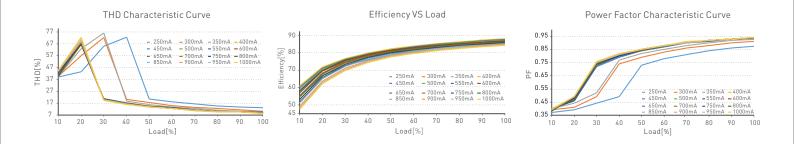

Flicker Test Table

| | Brightness | 100.00% | | | | |
|--|--|-----------------------|---------------------|-----|----------------|------------|
| IEEE 1789 | 1% 人 人 | | | | | |
| Limit Value of Modulation in Low Risk Areas Waveform Requestly of Optical output Limit value (%) f ≤ 8Hz 0.2 8Hz < f ≤ 90Hz | ↓ 1% ↓ 5% ↓ 10% ↓ 20% ▲ 30% ↓ 40% | 10.00% | IEEE 1789 High Risk | | * | |
| Limit Value of Modulation in No Effect Areas Waveform frequency of Optical output Limit value (%) f ≤ 104z 0.1 104z < f ≤ 90Hz | ★ 50% € 60% 70% € 80% | Modulation(%) | | | | |
| f > 3125Hz Exemption assessment (High frequency exemption) | ▶ 90%◆ 100% | 1.00% | | | IEEE 1789 No E | :ffect |
| Marks in the right chart are tested results | of different current | IEEE 1789 Low Risk | 10 | 100 | 1000 | 3125 10000 |


The output frequency is 0Hz in 100% brightness and its corresponding modulation is 0%, which could not be shown in the right chart.

Modulation Area

High Frequency Exemption Area




Application Diagram

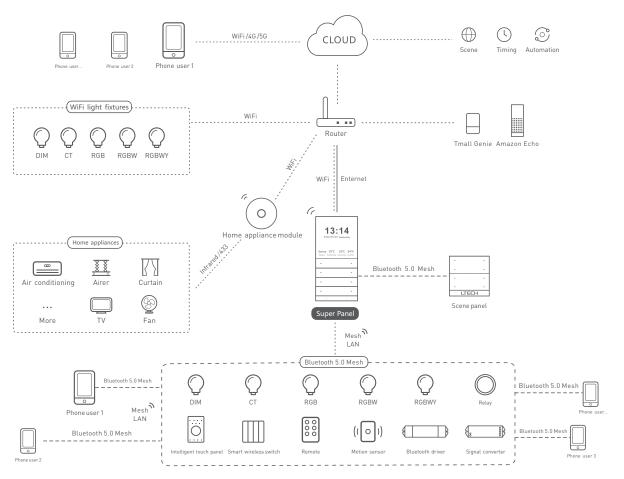

Recommend Applications



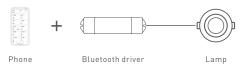

2、Both App and remote can control the driver after connecting the remote to the driver with App.



 Both App and Super Panel can control the driver simultaneously after connecting the Super Panel to the driver with App. By connecting the Super Panel to network ,you are allowed to control the driver, cloud scenes and automomation remotely with App.



 4_{\sim} More applications of intelligent control are waiting for you to set up.

Other Instructions

If the driver works with a remote, gateway ,intelligent wireless switch or other items ,please refer to related manuals.



App Operating Instructions

1.Register an account

Scan the QR code below with you mobile phone and follow the prompts to complete the app installation.




1.2 Open the App and log in or register an account.

| 08:55 | al 🐑 |
|-------------|-----------------|
| Welcome bac | |
| Phono/Email | |
| Password | ø |
| | Forgot password |
| Login | |


3.Control interface settings

After pairing up , go to the control interface. You'll be able to achieve your desired lighting effects by brightness changing and color temperature asjustment .Click"Theme" to access eight non-editable dynamic themes provided. Click "Mode" to access "Advanced Mode" and the App offers you eight editable advanced modes.

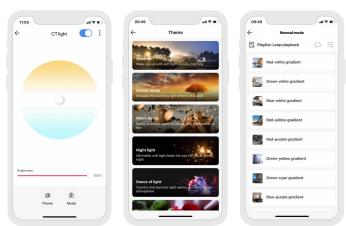

5.Light groups

Users are able to combine the same type of light fixtures into a group to control them simultaneously. Once you create the group, you can set the dim level or change color temperature more easily. Switch to "Group" menu and click"+"icon in the upper right corner. Follow the prompts to rename the group and click "Next" to pick the lights you are going to group together and to save them.

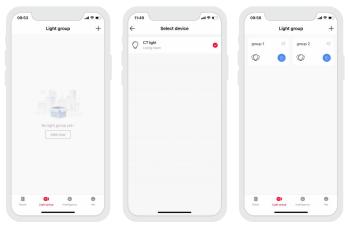

2. Control interface settings

Create a home if you are a new user. Click"+"icon in the upper right corner and access the"Add Device"list. Pick"Smart lighting -CT light (BLE)"from the list and select the light fixture type you want to add. Follow the prompts on the App. Power on the device firstly, and make sure the device is not connected to network. Then click"Bluetooth Search" and follow the prompts to add the device.

| 08:58 | | . 08: | 59 | | ·■ ♥ In. |
|-------------------------|-------------|------------------------|-----------------|---------------------|----------------------|
| A Home First fic | or- @ + | + ← | Add d | evice | 8 |
| All devices Living room | Dining room | Ma: Smar gater | t O | Q | Q |
| | | Smar lighti | | CT light (BLI) | RGB light (BLE) |
| | | Rem | te ORGBW light | | Dim Ight (WIFI) |
| | | waii swite Infra | h ed 🕤 | (BLE) | 0 |
| | | appli | CT Ight | ROB light (WIFI) | RGBW light (WiFi) |
| | A | Sens | or | | |
| No device fr | ound~ | Light grou | RGRWY | | |
| Add dev | ce | | light (WiFi) | | |
| | | | | | |
| | | | | | |
| | | | | | |

4.Function settings


Click ": "icon in the upper right corner of control interface and go to settings. The driver allows you to set up your desired lighting effects after being power on.

| 09:52 | ■ |
|-------------------------------|--|
| ← Lighting status after bei | ing po Save |
| 100% Brightness | |
| Light's off | |
| Preserve last lighting status | ø |
| Customize brightness | |
| | |
| | |

Lighting status after being power-on

6. Advanced functions


The driver can be linked up with gateway function devices (such as LTECH Super Panel) to achieve the advanced functions from cloud scenes to automation.

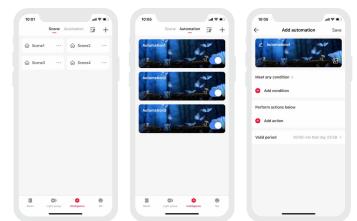



Reset The Device (Reset to factory defaults)

When the driver is power-on, turn it off and after 10s turn it on. After 2s, turn it off again. Repeat the same operation 10 times and then turn on the driver again. When the lamp is flashing (2 flashes/s), reset the device successfully.

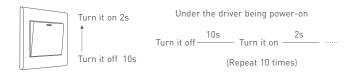

FAQs

- 1. What should I do if I fail to add the device?
 - 1.1 Please make sure the device is powered on normally and is in the activated mode.
 - 1.2 Please make sure the device hasn't been added by any other account. If it did, please reset to factory defaults manually.
 - 1.3 The recommended distance between the mobile phone and the device is no more than 20 meters.
 - 1.4 If the device has been forced to delete, please reset to factory defaults manually and then add the device again.
- 2. What should I do if the device disconnects from the network?
 - 2.1 Please make sure the device is powered on normally.
 - 2.2 Please make sure the router works with network available.
 - 2.3 If you control the device remotely, please make sure your phone network works normally.
- 3. How to control remotely and set cloud scenes?
- Remote control and cloud scenes can achieved only by working with LTECH Super Panel.
- 4. How to share control of your home devices?

Please go to "Me" - "Home Management" and access the home you want to share.

Click "Add Member" and follow the prompts to add members to your home.

Attentions

- Products shall be installed by qualified professionals.
- LTECH products are non-waterproof (special models excepted). Please avoid the sun and rain. When installed outdoors, please ensure it is mounted in a water proof enclosure.
- Good heat dissipation will extend the working life of products. Please ensure good ventilation.
- Please check if the working voltage used complies with the parameter requirements of products.
- The diameter of wire used must be able to load the light fixtures you connect and ensure the firm wiring.
- Before you power on products, please make sure all the wiring is correct in case of incorrect connection that causes damage to light fixtures.
- If a fault occurs, please do not attempt to fix products by yourself. If you have any question, please contact your suppliers.
- * This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.

Warranty Agreement

Warranty periods from the date of delivery 5 years.

Free repair or replacement services for quality problems are provided within warranty periods.

Warranty exclusions below:

- Beyond warranty periods.
- Any artificial damage caused by high voltage, overload, or improper operations.
- Products with severe physical damage.
- Damage caused by natural disasters and force majeure.
- Warranty labels and barcodes have been damaged.
- No any contract signed by LTECH.
- 1. Repair or replacement provided is the only remedy for customers. LTECH is not liable for any incidental or consequential damage unless it is within the law.
- 2. LTECH has the right to amend or adjust the terms of this warranty, and release in written form shall prevail.