Single Color LED Controller





1 Channel/Step-less dimming/Wireless remote control/Auto-transmitting/Synchronize/Push Dim

Features

- Match with Skydance's 2.4G dimming remote control, one RF controller accept up to 10 remote control.
- Auto-transmitting function: Controller automaticly transmit signal to another controller with 30m control distance.
- Synchronize on multiple number of controllers.
- Connect with external push switch to achieve on/off and dimming function.





Technical Parameters

Input and Output		
Input voltage	12-48VDC	
Output voltage	3-46VDC	
Output current	1CH,350mA/700mA	
Output power	1.05W-16.1W (350mA) 2.1W-32.2W (700mA)	
Output type	Constant current	


Environment	
Operation temperature	Ta: -30 °C ~ +55 °C
Case temperature (Max.)	Tc:+85°C
IP rating	IP20

Warranty and Protection		
Warranty	5 years	
Protection	Reverse Polarity Short circuit	

Dimming data		
Input signal	RF 2.4GHz + Push Dim	
Control distance	30m	
Dimming level	4096 levels	
Dimming range	0-100%	
Dimming curve	Logarithmic	

Safety and EMC		
EMC standard (EMC)	EN301 489,EN 62479	
Safety standard(LVD)	EN60950	
Radio Equipment(RED)	EN300 328	
Certification	CE,EMC,LVD,RED	

Mechanical Structures and Installations

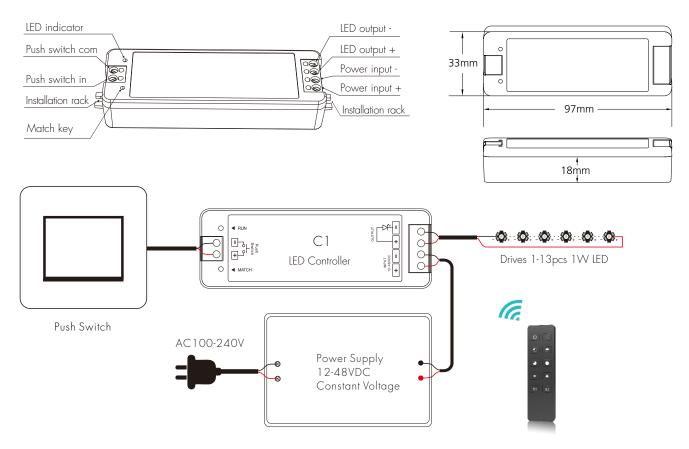

- 1. The controller could auto check and output a proper voltage according to its LED quantities.
- 2. The controller works on buck mode, the voltage of power supply should be greater than the total voltage of the seried LEDs.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote.

Delete:

Press and hold match key for 5s to delete all match, The light blinks 5 times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Application notes

1. All the receivers in the same zone.



Auto-transmitting: One receiver can transmit the signals from the remote to another receiver within 30m, as long as there is a receiver within 30m, the remote control distance can be limitless.

Auto-synchronization: Multiple receivers within 30m distance can work synchronously when they are controlled by the same remote.

Receiver placement may offer up to 30m communication distance. Metals and other metal materials will reduce the range. Strong signal sources such as WiFi routers and microwave ovens will affect the range.

We recommend for indoor applications that receiver placements should be no further apart than 15m.

2. Each receiver(one or more) in a different zone, like zone 1, 2, 3 or 4.



Push Dim Function

The provided Push-Dim interface allows for a simple dimming method using commercially available non-latching (momentary) wall switchs.

• Short press:

Turn on or off light.

• Long press (1-6s):

Press and hold to step-less dimming,

With every other long press, the light level goes to the opposite direction.

• Dimming memory:

Light returns to the previous dimming level when switched off and on again, even at power failure.

• Synchronization:


If more than one controller are connected to the same push switch, do a long press for more than 10s, then the system is synchronized and all lights in the group dim up to 100%.

This means there is no need for any additional synchrony wire in larger installations.

We recommend the number of controllers connected to a push switch does not exceed 25 pieces,

The maximum length of the wires from push to controller should be no more than 20 meters.

Dimming Curve

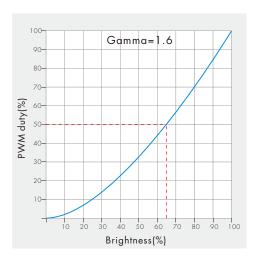

Malfunctions Analysis & Troubleshooting

Malfunctions	Causes	Troubleshooting
No light	 No power. Wrong connection or insecure. 	Check the power. Check the connection.
No response from the remote	 The battery has no power. Beyond controllable distance. The controller did not match the remote. 	 Replace battery. Reduce remote distance. Re-match the remote.