4 Channel Constant Voltage DMX512 & RDM Decoder

Model No.: D4-S

RDM/DIP switch/Logarithmic dimming



CE RoHS and LVD C

Ta: -30°C ~ +55°C

Tc:+85°C

Features

- Comply with the DMX512 standard protocols.
- Set DMX decode start address via DIP switch.
- RDM function can realize intercommunication between DMX master and decoder. For example, DMX decoder address can be set by DMX master console.
- Green termimal DNX signal input & output.

Technical Parameters


	Input and Output		Environment	
	Input voltage	12-24VDC	Operation temperature	Ta: -30
	Input current	24A	Case temperature (Max.)	Tc:+85
	Output voltage	4 x (12-24)VDC	IP rating	IP20
	Output current	4CH,6A/CH		
	Output power	4 x (72-144)W		
	Output type	Constant voltage	Warranty and Protectio	n
			Warranty	5 year
	Safety and EMC		Protection	Revers
	EMC standard (EMC)	EN55032:2015, EN61000-3-2:2014, EN61000-3-2:2013, EN55024 :2010/A1:2015		
	Safety standard(LVD)	EN 61347-1:2015 EN 61347-2-11:2015	Weight	
			Net weight	0.241
	Certification	CE,EMC,IVD	Gross weight	0.268


Warranty and Protection				
Warranty	5 years			
Protection	Reverse polarity			

eight	
et weight	0.241kg
oss weight	0.268kg
oss weight	0.268kg


User Manual Ver 1.0.4

Mechanical Structures and Installations

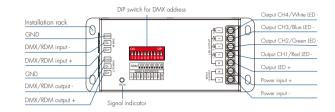

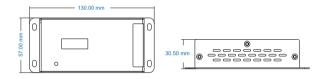

Wiring Diagram

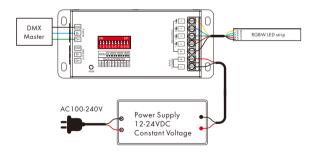

Note:

- 1. An DMX signal amplifier is needed if more than 32 decoders are connected, or use overlong signal line, signal amplification should not be more than 5 times continuously.
- 2. If the recoil effect occurs because of longer signal line or bad line quality, please try to connect 0.25W 90-120 Ω terminal resistor at the end of each DMX signal line.

DIP Switch



RDM Mode: The DIP switch 1-10 are all OFF.

DMX Mode: FUN=OFF (the 10th DIP switch = OFF) Setting DMX addresses with DIP switch 1-9.



4567

Self-testing Mode: FUN=ON (the 10th DIP switch = ON) Setting self-testing mode with DIP switch 1-9.

RDM Mode

When change DIP switch 1-10 to OFF, the defaulted DMX start decode address become 1. then DMX start decode address can be set by DMX/RDM console.

DMX Mode

DMX strart decode address value = the total value of (1-9), to get the place value when in "on" position, otherwise will be 0.

E.g.1: Set start address to 16.





E.g.2: Set start address to 73.



E.g.3: Set start address to 170.

Self-testing Mode

	2	3 4	5 6	7 8	B 9	9 10
	Static Green	Static Yellow	Static Purple	6 Co Jump	lors ing	
Stati Rea				itic hite	6 Co Smc	

1. For dynamic effects (DIP Switch 8,9 = on) : DIP switch 1-7 is used to get 7 speed levels. (7=on, the fastest level)

2. When several DIP switches are on, subjected to the highest switch value.

As the figure above shows, the effect will be 6 colors smooth at 7 speed level.

DMX Dimming

Each D4-S DMX decoder occupy 4 DMX address when connecting the DMX console. For example, the defaulted start address is 1, their corresponding relationship in the form:

DMX Console	DMX Decoder Output
CH1 0-255	CH1 PWW 0-100% (LED R)
CH2 0-255	CH2 PW/M 0-100% (LED G)
CH3 0-255	CH3 PW/M 0-100% (LED B)
CH4 0-255	CH4 PWW 0-100% (LED W)

Dimming curve

